

End User License Agreement NAVTEQ

PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY
BEFORE USING THE NAVTEQ DATABASE

NOTICE TO THE USER

THIS IS A LICENSE AGREEMENT - AND NOT AN AGREEMENT FOR SALE - BETWEEN YOU AND NAVTEQ B.V. FOR YOUR COPY OF THE NAVTEQ NAVIGABLE MAP DATA-BASE, INCLUDING ASSOCIATED COMPUTER SOFTWARE, MEDIA AND EXPLANATORY PRINTED DOCUMENTATION PUBLISHED BY NAVTEQ (JOINTLY "THE DATA-BASE"). BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT ("AGREEMENT"). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE DATA-BASE, ALONG WITH ALL OTHER ACCOMPANYING ITEMS, TO YOUR SUPPLIER FOR A REFUND.

OWNERSHIP

The Database and the copyrights and intellectual property or neighboring rights therein are owned by NAVTEQ or its licensors. Ownership of the media on which the Database is contained is retained by NAVTEQ and/or your supplier until after you have paid in full any amounts due to NAVTEQ and/or your supplier pursuant to this Agreement or similar agreement(s) under which goods are provided to you.

LICENSE GRANT

NAVTEQ grants you a non-exclusive license to use the Database for your

personal use or, if applicable, for use in your business' internal operations. This license does not include the right to grant sub-licenses.

LIMITATIONS ON USE

The Database is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws (e.g. national laws based on the European Software Directive (91/250) and the Database Directive (96/9)), you may not extract or reutilize substantial parts of the contents of the Database nor reproduce, copy, modify, adapt, translate, disassemble, decompile, reverse engineer any portion of the Database. If you wish to obtain interoperability information as meant in (the national laws based on) the European Software Directive, you shall grant NAVTEQ reasonable opportunity to provide said information on reasonable terms, including costs, to be determined by NAVTEQ.

TRANSFER OF LICENSE

You may not transfer the Database to third parties, except when installed in the system for which it was created or when you do not retain any copy of the Database, and provided that the transferee agrees to all terms and conditions of this Agreement and confirms this in writing to NAVTEQ. Multi-disc sets may only be transferred or sold as a complete set as provided by NAVTEQ and not as subset thereof.

LIMITED WARRANTY

NAVTEQ warrants that, subject to the warnings set out below, for a period of 12 months after acquisition of your copy of the Database, it will perform substantially in accordance with NAVTEQ's Criteria for Accuracy and Completeness existing on the date you acquired the Database; these criteria are available from NAVTEQ at your request. If the Database does not perform in accordance with this limited warranty, NAVTEQ will use reasonable efforts to repair or replace your non-conforming copy of the Database. If these efforts do not lead to performance of the Database in accordance with the warranties set out herein, you will have the option to either receive a reasonable refund of the price you paid for the Database or to rescind this Agreement. This shall be NAVTEQ's entire liability and your sole remedy against NAVTEQ. Except as expressly provided in this section, NAVTEQ does not warrant nor make any representations regarding the use of results of the use of the Database in terms of its correctness, accuracy, reliability, or otherwise. NAVTEQ does not warrant that the Database is or will be error free. No oral or written information or advice provided by NAVTEQ, your supplier or any other person shall create a warranty or in any way increase the scope of the limited warranty described above. The limited warranty set forth in this Agreement does not affect or prejudice any statutory legal rights that you may have under the legal warranty against hidden defects.

If you did not acquire the Database from NAVTEQ directly, you may have statutory rights against the person from whom you have acquired the Database in addition to the rights granted by NAVTEQ hereunder according to the law of your jurisdiction. The above warranty of NAVTEQ shall

not affect such statutory rights and you may assert such rights in addition to the warranty rights granted herein.

LIMITATION OF LIABILITY

The price of the Database does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the Database. Accordingly, in no event shall NAVTEQ be liable for any consequential or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the Database, whether in an action in contract or tort or based on a warranty, even if NAVTEQ has been advised of the possibility of such damages. In any event NAVTEQ's liability for direct damages is limited to the price of your copy of the Database.

THE LIMITED WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

WARNINGS

The Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results. The Database does not include or reflect information

on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNING LAW

This Agreement shall be governed by the laws of the jurisdiction, in which you reside at the date of acquisition of the Database. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Database shall apply. In all other cases, or if the jurisdiction where you acquired the Database cannot be defined, the laws of the Netherlands shall apply. The courts competent at your place of residence at the time you acquired the Database shall have jurisdiction over any dispute arising out of, or relating to this Agreement, without prejudice to NAVTEQ' right to bring claims at your then current place of residence.

End-User License Agreement Gracenote

USE OF THIS PRODUCT IMPLIES ACCEPTANCE OF THE TERMS BELOW.

Gracenote® MusicID® Terms of Use

This device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to do online disc identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers ("Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to

you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote MusicID Service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote MusicID service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote MusicID Service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its online services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCI-

DENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote 2006 Version 2.2

CD and music-related data from Gracenote, Inc., copyright © 2000-2006 Gracenote. Gracenote Software, copyright © 2000-2006 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523. Gracenote and Cddb are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

Table of Contents

Safety Guidelines	6
Introduction	
Warnings	6
Safety References	6
Intended Use	6
System Care	6
Software Update	6
Safe Usage of the Radio Navigation System	6
Connections	6
Touch Screen	6
CD/DVD Drive	6
GPS Navigation Antenna	6
Satellite Radio Antenna	6
Other Electronic Devices	6

General Handling

User Interface Elements	6
Soft-Keys	6
Hard-Keys	6
Electronic Vehicle Information Center (EVIC)	6
Steering Wheel Mounted Controls	6
AM/FM/SAT Operation	6
HDD/Disc/Jukebox Operation	6
Vehicle Entertainment System™ Operation	6
Audio Settings	6
Volume	6
Audio Control Menu	6

Getting Started

Disclaimer for Navigation Radio	6
Change the Language	6
Set the Time	6
Store Radio Presets	6
Connect Bluetooth Phone	6

<i>Set Default Country</i>	7	<i>SAT MENU</i>	7
<i>Set Default State</i>	7	<i>Channel vs. Preset List Selection</i>	7
<i>Enter Home Address</i>	7	<i>Re-Subscribe to Sirius Satellite Radio</i>	7
<i>Speech Dialogue System Tutorial</i>	7	<i>Display Settings</i>	7
<i>UConnect™ Tutorial</i>	7	<i>Screen-saver</i>	7
		<i>View Settings</i>	7
Radio		Media	
<i>Radio Mode</i>	7	<i>Disc Mode</i>	7
<i>Overview</i>	7	<i>Overview</i>	7
<i>Satellite Radio Mode</i>	7	<i>Disc Requirements</i>	7
<i>Station Presets</i>	7	<i>Inserting a Disc</i>	7
<i>Change a Channel or Frequency</i>	7	<i>Removing a Disc</i>	7
<i>RBDS (Radio Broadcasting Data System)</i>	7	<i>Selecting Disc Mode</i>	7
<i>Radio Text Information</i>	7	<i>Scan Search</i>	7
<i>MUSIC TYPE (Program Type Filter)</i>	7	<i>Next Track</i>	7
<i>RBDS (FM) Program Types</i>	7	<i>Previous Track</i>	7
<i>Sirius Satellite Radio Program Types</i>	7	<i>Fast Forward Track</i>	7
<i>Radio Settings</i>	7	<i>Rewind Track</i>	7
<i>AM / FM MENU</i>	7	<i>Displaying the Elapsed Title Time</i>	7

<i>Select Title from list</i>	8	<i>Next Track</i>	8
<i>Disc Info</i>	8	<i>Previous Track</i>	8
<i>Gracenote Music Recognition Technology</i>	8	<i>Fast Forward Track</i>	8
<i>Copy Disc to Hard-Drive</i>	8	<i>Rewind Track</i>	8
<i>Disc Menu</i>	8	<i>Displaying the Elapsed Title Time</i>	8
<i>Playing a MP3/WMA Disc</i>	8	<i>Jukebox Menu</i>	8
<i>Playing a Video DVD</i>	8	<i>Random Playback</i>	8
<i>DVD MENU Controls</i>	8	<i>Repeat Track</i>	8
<i>DVD Playback Controls</i>	8	<i>Edit Jukebox</i>	8
<i>DVD Video Menu</i>	8	Hard Disk Drive Mode (HDD)	8
<i>Disc Skipping</i>	8	<i>Copy Audio Disc to Hard-Drive</i>	8
<i>Temperature Protection</i>	8	<i>Copy WMA/MP3 Files to Hard-Drive</i>	8
Jukebox Mode (JB)	8	<i>Copying complete Disc</i>	8
<i>Overview</i>	8	<i>Selective Song Copying from disc</i>	8
<i>Selecting Jukebox Mode (JB)</i>	8	<i>Copying from USB</i>	8
<i>Fill a Jukebox Album from Audio Disc</i>	8	<i>Playing Audio Files from the Hard Disk Drive</i>	8
<i>Fill a Jukebox Album from HDD Playlist</i>	8	<i>Next Track</i>	8
<i>Clear a Jukebox Album Slot</i>	8	<i>Previous Track</i>	8
<i>Selecting a Track</i>	8	<i>Fast Forward Track</i>	8

<i>Rewind Track</i>	9	<i>How to close the cover</i>	9
<i>Displaying the Elapsed Title Time</i>	9	AUX Mode	9
<i>HDD Menu</i>	9	Speech Dialogue System	
<i>Random Playback</i>	9	<i>Voice Recognition System (VR)</i>	9
<i>Repeat Track</i>	9	<i>Display Menu</i>	9
<i>Editing Playlists on the Hard Disk Drive</i>	9	<i>Commands</i>	9
<i>Deleting All Playlists from the Hard Disk Drive</i>	9	<i>Changing the volume</i>	9
<i>Importing Pictures</i>	9	<i>Main Menu</i>	9
Remote Devices		<i>Radio Menu</i>	9
Vehicle Entertainment System™(VES)	9	<i>Radio AM</i>	9
<i>Receiving audio/video from the VES</i>	9	<i>Radio FM</i>	9
<i>Sending audio/video and controlling the VES</i>	9	<i>Satellite Radio</i>	9
<i>VES LOCK</i>	9	<i>Disc</i>	9
<i>VES UNLOCK</i>	9	<i>Hard Drive</i>	9
<i>Playing a Video DVD for the rear VES</i>	9	<i>VES</i>	9
USB Connector	9	<i>Memo</i>	9
<i>Compatible devices</i>	9	<i>Navigation</i>	9
<i>How to open the cover</i>	9	<i>System Setup</i>	9
		<i>Voice Training</i>	9

Hands Free Cellular Telephone

<i>UConnect™ Overview</i>	10
<i>Compatible Phones</i>	10
<i>Bluetooth</i>	10
<i>UConnect™ microphone</i>	10
<i>Operations</i>	10
<i>UConnect™ hard-key</i>	10
<i>Barge In – Overriding Prompts</i>	10
<i>Help Command</i>	10
<i>Cancel Command</i>	10
<i>Dial by Saying a Number</i>	10
<i>Call by Saying a Name</i>	10
<i>Phone Book</i>	10
<i>Add Names to Phonebook</i>	10
<i>Voice Tags</i>	10
<i>Edit Phonebook Entries</i>	10
<i>Delete Phonebook Entry</i>	10
<i>Delete/Erase “All” Phonebook Entries</i>	10
<i>List All Phonebook Names</i>	10

<i>Phone Call Features</i>	10
<i>Answer or Reject an Incoming Call</i>	10
<i>Make a Second Call</i>	10
<i>Place / Retrieve a Call from Hold</i>	10
<i>Toggle between Calls</i>	10
<i>Conference Call</i>	10
<i>Three-Way Call</i>	10
<i>Call Termination</i>	10
<i>Redial</i>	10
<i>Call Continuation</i>	10
<i>Emergency Assistance</i>	10
<i>Towing Assistance</i>	10
<i>Paging</i>	10
<i>Voice Mail Calling</i>	10
<i>Working with Automated Systems</i>	10
<i>Turning Confirmation Prompts On/Off</i>	10
<i>Phone and Network Status Indicators</i>	10
<i>Dial Using the Cellular Phone Keypad</i>	10
<i>Mute/Un-mute (Mute off)</i>	10

<i>Advanced Phone Connectivity</i>	11	<i>System Limitations</i>	11
<i>Transfer Call to Cellular Phone</i>	11	Navigation Main Menu	11
<i>Transfer Call to UConnect™ System</i>	11	<i>Selecting NAV Main Menu</i>	11
<i>Automatic Transfer Call to UConnect™ System</i>	11	<i>Inputting Information</i>	11
<i>List All Paired Cellular Phone Names</i>	11	Destination Input	11
<i>Select another Cellular Phone</i>	11	<i>Overview Destination Entry Screen</i>	11
<i>Delete UConnect™ Paired Cellular Phones</i>	11	<i>Destination Input by Street Address</i>	11
<i>Things You Should Know About</i>	11	<i>Changing State/Province and/or Country</i>	11
<i>Voice Recognition (VR)</i>	11	<i>Destination Input by Intersection</i>	11
<i>Far End Audio Performance</i>	11	<i>Destination by Point of Interest</i>	11
<i>Bluetooth Communication Link</i>	11	<i>POI Local Area</i>	11
<i>Power-Up</i>	11	<i>POI Nearby Destination</i>	11
<i>Voice Tree - Main Menu</i>	11	<i>POI in Map Area</i>	11
Navigation		<i>Destination Input by Point on Map</i>	11
General Notes	11	<i>Destination Input by Geo Coordinate</i>	11
<i>System Overview</i>	11	<i>Destination Input by Recent Destinations</i>	11
<i>Navigation Software</i>	11	<i>Destination Input by Address Book</i>	11
<i>Software Updates</i>	11	<i>Destination Input by Saved Locations</i>	11
<i>Navigation Database</i>	11	<i>Destination Input by Voice</i>	11

<i>Guide Me Home</i>	12	<i>GPS Information</i>	12
<i>Where Am I Now?</i>	12	<i>Guidance Prompts</i>	12
<i>Emergency Info</i>	12	Map Viewer	12
<i>Record New Trail</i>	12	<i>Map Zoom Level</i>	12
Route Guidance	12	<i>Map Orientation</i>	12
<i>Navigation View Settings</i>	12	<i>3D Map Viewer</i>	12
<i>Map Items</i>	12	Stop Over	12
<i>Repeat Navigation Announcement</i>	12	Trip Planner	12
<i>Automatic Re-Routing</i>	12	TMC by Sirius Satellite Radio	12
<i>Route Options</i>	12	<i>Display Traffic Messages</i>	12
<i>Canceling Route Guidance</i>	12	<i>TMC Legend</i>	12
<i>Unverified Navigation Database Area</i>	12	Address Book	12
<i>Notes on Route Guidance</i>	12	<i>Overview</i>	12
Navigation Options	12	<i>Entering/Editing/Deleting an Address</i>	12
<i>Options before activating the route guidance</i>	12	<i>Search a Contact in the Address Book</i>	12
<i>Options During Route Guidance</i>	12	System Information	
Navigation Default Settings	12	<i>User Data Backup</i>	12
<i>Set Measurement Metric/US</i>	12	<i>Software and Database Updates</i>	12
<i>Set Default Routing Method</i>	12		

Troubleshooting

<i>Radio</i>	13
<i>Disc</i>	13
<i>Navigation</i>	13
<i>Voice Recognition</i>	13
<i>UConnect™</i>	13

Glossary of Terms

Safety Guidelines

Ensure that all persons read this manual carefully before using the navigation system. It contains instructions on how to use the system in a safe and effective manner.

Warning: Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- When using the navigation system to route you to a emergency facility, contact the facility to verify its location.
- Not all emergency service locations are contained in the database. Please use your own judgement and ask for directions in such situations.
- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary pull over at a safe location.
- Road conditions and regulations take precedence over information contained on the map display. Observe actual traffic restrictions and circumstances when driving.
- Stop use immediately if problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized DaimlerChrysler dealer to repair.
- There may be situations where the navigation system erroneously displays the vehicles location. Use your own driving judgement in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should automatically correct the vehicle position within a few minutes.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The map database is designed to provide you with route suggestions and does not take into account the relative safety of suggested route or factors that may affect the time required to reach your destination. Use your own personal judgement if the navigation system is unable to provide you with an alternative route.

Introduction

Warnings

This manual contains WARNINGS against operating procedures that could result in an accident or bodily injury. If you do not read the entire manual you may miss important information. Observe all warnings!

The information given in this manual is subject to change.

Safety References

Before operating this navigation system for the first time, please read this manual carefully. Note the safety precautions described in this manual. If you have any questions, please contact the vehicle manufacturer.

Intended Use

Generally recognized rules of navigation technology were maintained during the development and manufacture of the RER radio navigation system. When using this product, be aware of state-specific norms and guidelines.

Visit <http://www.chrysler.com/mygig/> for updates, additional information, compatible phones, etc.

System Care

Software Update

Both navigation data and Gracenote® data are software updatable. Visit <http://www.chrysler.com/mygig/> or contact your DaimlerChrysler Dealership for the latest available software.

Safe Usage of the Radio Navigation System

Read all instructions in this manual carefully before using your radio system to ensure proper usage!

Your radio is not a toy. Do not let young children use your radio unsupervised.

Permanent hearing loss may occur if you play your music at the highest volumes. Exercise caution when setting the volume on your radio.

Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your radio.

Note: Many features of this radio are speed dependent. For your own safety it is not possible to use the press screen keyboard to enter a name (e.g., street name), while the vehicle is in motion.

Keep drinks, rain, and other sources of moisture away from your radio. Besides damage to your radio, moisture can cause electric shocks with any electronic device.

Note: In a convertible vehicle, the system performance may be compromised with roof top down.

Connections

Never force any connector into the ports of your radio. Make sure your connectors are the correct shape and size before you connect.

Any attached cable should be routed so that it will not apply any pressure to the connection.

Do not use a USB device which will interfere with the operation of opening the display.

Touch Screen

Do not touch the screen with any hard or sharp objects , which could scratch the touch screen surface! (pen, USB stick, jewelry, etc...)

Note: It is possible to use plastic stylus for press screen enabled devices such as PDA and Pocket PC's.

Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.

If necessary, use a lint-free cloth dampened with cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow solvent manufacturer's precautions and directions.

CD/DVD Drive

Do not insert any damaged, warped, scratched or dirty CD's or DVD's into the CD/DVD player.

Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

Do not insert more than 1 (one) CD/DVD at a time into the drive slot.

Do not insert anything other than the supported CD/DVD formats. See **Disc Mode** section for information on supported CD/DVD formats.

GPS Navigation Antenna

The antenna for the navigation GPS system is mounted in various locations (depending on the vehicle model) within the dashboard. Do not place items on the dashboard around the GPS antenna location. Objects placed within the line of sight of the antenna will decrease performance. Do not place items directly on or above the antenna.

Satellite Radio Antenna

The antenna for the satellite radio is mounted on the roof of the vehicle. Do not place items on the roof around the rooftop antenna location. Objects placed within the line of sight of the antenna will cause decreased performance. Larger luggage items should be placed as far forward as possible. Do not place items directly on or above the antenna.

Other Electronic Devices

You may bring other electronic devices into your vehicle (e.g., PDA, iPod, laptop computer, etc.) Some of these devices may cause electromagnetic interference with the GPS. If a degradation in the navigation is observed, turn the devices off, or keep them as far away from the GPS antenna as possible.

General Handling

User Interface Elements



Power to operate the navigation radio is supplied through the ignition switch, which must be in the ON, ACC or in ACC Delay mode in order to operate the navigation radio.

(4) ON/OFF VOLUME

It is also possible to set the unit in standby mode during driving, by pressing the ON/OFF VOLUME rotary knob (4).

Note: If the ignition is switched off with the radio in standby mode, the radio memorizes the standby state when the ignition is switched on again. Press the (4) ON/OFF VOLUME rotary knob to switch the radio on. The navigation software is always working when the ignition is switched on, even if the radio is in standby mode. It is possible to eject the CD and to display the time if the unit is switched off.

Soft-Keys

Soft-keys are accessible on the touch screen.

Hard-Keys

Hard-keys on the left and right side of the radio faceplate.

(1) OPEN/CLOSE

To open or close the display, press the OPEN CLOSE hard-key (1).

After opening the display, it takes a few seconds to eject a CD/DVD, if one was in the slot.

When inserting a disc, make sure the label is facing up.

The display will close automatically after inserting the disc.

Note: It may take several seconds to recognize the type of inserted disc (CD, DVD, MP3, etc.)

(2) SEEK UP/ SEEK DOWN

Press the SEEK up and the SEEK down hard-key (2) to seek through radio stations in AM, FM, or SAT bands. Seek through tracks in CD or jukebox modes or through songs in the HDD playlist.

(3) RADIO/MEDIA

Press the RADIO/MEDIA hard-key (3) to toggle between RADIO and MEDIA mode.

(5) VR

Press the VR hard-key (5) and wait for the confirmation beep before you say a voice command.

(6) UConnect™ (optional)

Press the UConnect™ hard-key (6) to either activate the UConnect™ system or to cancel an active phone call.

Note: If you are in one of the navigation menus (NAV Menu, MAP display, etc.), you need to press the UConnect™ hard-key twice to end an active

call.

(7) MENU

Press the MENU hard-key (7) to access the system settings menu.

Note: Press the MENU hard-key in an active mode in order to change mode specific settings.

(8) NAV

Press the NAV hard-key (8) either to switch to the navigation mode or to toggle between the navigation menu and the map viewer menu.

(9) USB Connector

Connect a supported device into the USB Connector (9) in order to copy files to the internal hard disk drive.

Note: See USB Connector section for information on supported devices.

(10) AUX Connector

Connect an external audio device into the AUX Input (10) (e.g., MP3 player, video-game), to play the device audio through the car audio system.

Electronic Vehicle Information Center (EVIC)

Some vehicles feature an Electronic Vehicle Information Center (EVIC) with driver-interactive display. The EVIC is normally located in the instrument cluster or overhead. It can display radio station preset frequencies, CD disc number, satellite radio channel, and navigation system information.

Steering Wheel Mounted Controls

The remote sound system controls are located on the surface of the steering wheel. Please refer to the vehicle specific owner's manual for detailed information.

The following describes general steering wheel functionality:

1. The VOLUME switch controls the volume of the sound system. Pressing the top of the rocker switch will increase the volume and pressing the bottom of the rocker switch will decrease the volume.
2. The MODE ADVANCED switch changes the mode of the navigation radio between the various modes available (FM, AM, CD, DVD, SAT, NAV etc.). To switch to the navigation mode, push and hold the switch. To leave the navigation mode, push the switch momentarily.
3. The FUNCTION SELECT switch advances the navigation radio to the next preset, changes the current disc when in disc mode, etc. The function is different depending upon which mode is in use.
4. The SCROLL switch changes selections such as radio station, CD track, and satellite radio channel, depending upon the current mode.

The following describes the operation of the SCROLL switch in each mode:

AM/FM/SAT Operation

Pressing the top of the switch will seek up for the next available station and pressing the bottom of the switch will seek down for the next available station.

HDD/Disc/Jukebox Operation

Pressing the top of the switch will go to the next track on the disc, and pressing the bottom of the switch will go to the beginning of the current track, or to the beginning of the previous track, if it is within eight seconds of the start of the current track.

Vehicle Entertainment System™ Operation

If equipped with a remote video player, this control will function the same way as in disc mode.

Use the ON/OFF VOLUME hard-key (4) to adjust the volume of the currently playing audio source. While you adjust the volume, the name of the audio source and a volume indicator is displayed in the lower left corner of the display.

Audio Settings

Volume

Audio Control Menu

Press the MENU hard-key (7) on the right side of the radio. Then press the Audio Control soft-key to get to the audio control menu.



Use either the arrow soft-keys or the cross-hair on the screen to change Balance and Fade. The CENTER soft-key resets the settings.



Use either the arrow soft-keys or the sliders on the screen to adjust BASS, MID, and/or TREBLE.

Getting Started

Note: The ignition switch must be in the ON or ACC position to operate the navigation radio.

If the unit is off, switch it on using the ON/OFF Volume rotary knob.

Disclaimer for Navigation Radio



Before using the navigation radio read and accept the disclaimer. The disclaimer will be activated after the ignition is turned on.

Change the Language

The navigation radio will conform to the vehicle language set in the ELECTRONIC VEHICLE INFORMATION CENTER (EVIC), if equipped.

If you change the language in the navigation radio, the vehicle will change the language for all display information. Refer to the vehicles owner's manual.

To change the language with the navigation radio:

1. Press the MENU hard-key on the right side of the radio.
2. Then press the System Setup soft-key to get to the System Setup menu.



3. Press the Language soft-key and select a language.

Set the Time

1. Press the time soft-key in the lower left corner of the screen.



The minutes are set by the GPS system.

2. Press the Set Time Zone soft-key to change to the desired time zone.

3. Press the Daylight Savings soft-key to switch Daylight Saving on or off.

It is possible to set up your own time (ahead or behind actual GPS time), by pressing the USER CLOCK soft-key.

Store Radio Presets

1. Press the Media hard-key repeatedly until AM FM SAT is displayed in the upper left corner of the screen.



2. Select the radio band by touching either the AM, FM or SAT soft-key.

3. Either press the SEEK up/down hard-keys, or touch the SCAN soft-key, DIRECT TUNE soft-key, or the left and right arrows to change the currently playing station.

4. Touch and hold one of the PRESET soft-keys in the list to the right, until you hear a confirmation beep (Approximately 4 seconds).



You can use the PAGE soft-keys to scroll through the list of presets.

Note: If the preset list is not displayed. Press the LIST soft-key located in the bottom line of the screen.



You can use the FULLSCREEN soft-key to toggle between full- and split screen mode. Long preset names are displayed in fullscreen mode.



You can use the BACK soft-key to switch to the previous menu.

Connect Bluetooth Phone

1. Press the MENU hard-key on the right side of the radio.
2. Then touch the System Setup soft-key to get to the System Setup menu.
3. Touch the Phone Pairing soft-key to access the Bluetooth Devices menu.



This menu lists all paired bluetooth devices.

4. Press the PAIR soft-key to start a new pairing.



5. Enter any 4 digit security PIN and touch the PAIR soft-key again.



6. The pairing procedure starts. Refer to the user's manual of your phone to complete the procedure.

7. You will then be asked to set a priority for the paired phone. If there is more than one paired phone available, the navigation radio will try to connect to the phone with the highest priority setting.

Set Default Country

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.



2. Touch the NAV Settings soft-key.

3. Touch the Set Default Country soft-key to select your default country.

Set Default State

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.



2. Touch the NAV Settings soft-key.

3. Touch the Set Default State soft-key to choose your default state.

Enter Home Address

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.

2. Touch the Guide Me Home soft-key to enter your home address.



If no home address has been set, touch YES to access the Enter Home Address menu.

3. Touch Street Address to enter your address.



4. Touch the soft-key with your state's name and enter your street name into the speller.

Note: Read more about destination input and the predictive speller in the Navigation section of this manual.

5. Once the street name has been input, touch continue to confirm.

6. Enter the house number into the next screen. If more than one city has this address, you will then need to select your city from a list.

Once the address is entered completely, the system shows a map of your home address area.



7. Touch the SAVE soft-key to confirm the address.

After you have entered your home address, the system will start a route guidance to your home every time you press the Guide Me Home soft-key.



Speech Dialogue System Tutorial


When you press the VR hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a speech dialogue system tutorial.

Press any hard-key or touch the display to cancel the tutorial.

UConnect™ Tutorial

When you press the UConnect™ hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a UConnect™ system tutorial.

Press any hard-key or touch the display to cancel the tutorial.



Radio

Radio Mode

Overview

The RER navigation radio is equipped with 3 different tuners:

FM 87.7 MHz - 107.9 MHz (RDBS capable)

AM 530 kHz - 1710 kHz

SAT Sirius Satellite Radio

Toggle between the radio and the media menus by pressing the RADIO/MEDIA hard-key. The different tuner modes can be selected via the tabs in the radio screen.

Satellite Radio Mode

In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.



Station Presets

There are 12 station presets available for storing the radio stations in each tuner range.

In order to store the desired station, touch one of the station preset soft-keys for 4 seconds. You will also see the radio station stored in the highlighted soft-key, and you will hear a confirmation beep when the station is saved.

Change a Channel or Frequency

Press the SEEK up or the SEEK down hard-key to play the next available station or channel.

Select DIRECT TUNE to enter a frequency or a channel number, and confirm your selection by pressing the GO soft-key.

Touch the arrows to the left and right of the DIRECT TUNE soft-key to step manually through the frequency or channel roster.

Select SCAN for a five second preview of each listenable station in the frequency band. Touch the SCAN soft-key again to stop the scan function and to select a radio station.

RBDS (Radio Broadcasting Data System)

This radio navigation system is capable of receiving RBDS signals in the FM band. RBDS is a technology used for transmitting textual information about the music type, song and artist for FM band music. This information is shown on the display.

Note: Not all radio stations support RBDS.

The RBDS information is displayed below the frequency reading of the currently playing radio station.

Radio Text Information

Select INFO to display additional radio text information in the right half of the screen.

Select CLOSE INFO to hide additional radio text information.

MUSIC TYPE (Program Type Filter)



Program Type (PTY) is only available in FM and SAT mode. Radio stations are grouped according to their program (e.g., Soft Rock, Rhythm & Blues, etc.).

Select MUSIC TYPE to enable and/or disable desired program types. The SEEK and SCAN function will then only display stations with matching program types.

RBDS (FM) Program Types

Adult Hits, Classic Rock, Classical, College, Country, Information, Jazz, Language, News, Nostalgia, Oldies, Personality, Public, Religious Music, Religious Talk, Rhythm and Blues, Rock, Soft, Soft Rhythm and Blues, Soft Rock, Sports, Talk, Top 40, Weather.

Sirius Satellite Radio Program Types

Pop, Rock, Electronic/Dance, Hip-Hop/R&B, Country, Christian, Jazz/Blues, Standards, Classical, Latin, International, Talk, Comedy, Lifestyles, Family & Kids, Sports Talk & News, NFL, More Sports, NBA, Financial News, US News, Public Radio, International News, Public Radio, Traffic & Weather, Religion.

You can find Sirius' current terms & conditions at <http://www.sirius.com>

Radio Settings

AM / FM MENU

There are no specific settings for this mode.

SAT MENU

While in SAT Mode press the MENU hard-key to display the SAT Menu.



Channel vs. Preset List Selection

Select this feature to allow regular presets as supposed to Sirius Satellite Radio channel list.

Re-Subscribe to Sirius Satellite Radio

New vehicle purchasers or lessees will receive a free one-year subscription to Sirius Satellite Radio and Traffic Services with your navigation radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

Touch the Subscription soft-key to access the Subscription Information screen.



Write down the SIRIUS ID numbers for your receiver. To reactivate your service either call the number listed on the screen or visit the provider online.

Display Settings

Press the MENU hard-key and touch the Display Setting soft-key to access the Display Settings menu.



Select the Daytime Colors soft-key to switch to manual daytime mode and to adjust the brightness of the display using daytime colors.

Select the Nighttime Colors soft-key to switch to manual nighttime mode and to adjust the brightness of the display using nighttime colors.

Select the Auto Color soft-key to switch to automatic daytime/nighttime mode and to control the brightness of the display using the light switch of the vehicle.

Touch the DONE soft-key to save your settings and to return to the AM/FM/SAT Menu.

Screen-saver

To activate the screen-saver press the MENU hard-key and touch the screen saver soft-key.

Once the screen saver is active, press any hard-key or touch the display to deactivate it.

View Settings

Press the MENU hard-key and touch the Default View soft-key to enable the default view mode, where the vehicle brand logo is displayed in the right half of the screen.

Touch the Picture View soft-key to enable the picture view mode, where a pictures can be displayed on the right half of the radio screen. Refer to the Hard Disk Drive section for a detailed example.

Touch the Map View soft-key to enable the map view mode, where the navigation map can be displayed on the right half of the radio screen.



Media

Disc Mode

Overview

The navigation radio is equipped with a CD/DVD player.



Toggle between the media and the radio menus by pressing the RADIO/MEDIA hard-key. The different media modes can be selected via the tabs in the radio screen.

Disc Requirements

Caution: this disc player will accept 4 3/4 inch (12 cm) disc only. The use of other sized discs may damage the disc player mechanism.

The radio is capable of playing compact discs (CD), recordable compact discs (CD-R), rewritable compact discs (CD-RW), re-recordable DVD-R, DVD+R, DVD-RW, and DVD+RW, compact discs

Your radio will play the following formats:

MP3, WMA, CD Audio, DVD Audio, and DVD Video.

Do not insert anything other than the supported CD/DVD formats.

SACD (SACD layer) , VCD, DualDisc , SVCD , VCD format on DVD and MPEG-4 are not supported.

A complete list of supported CD/DVD formats is available at <http://www.chrysler.com/myqiq/>

Inserting a Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

Note: A faulty CD is NOT automatically ejected. Use only standard size discs. Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

High definition content and media (e.g HD-DVD, Blue-Ray) is not supported.

If the user doesn't remove an ejected CD within approximately 10 seconds, the CD will reload.

Note: On MP3 and WMA CD's with a large number of songs, it may take several seconds to read, play, and display information for all songs on the disc.

Note: Recording your own CD on a home computer at a lower write speed will result in a more consistent quality.

Removing a Disc

1. Press the OPEN/CLOSE hard-key.
2. The disc is ejected and can be removed.

Note: If the disc is not removed within approximately 10 seconds, the unit pulls it back into the slot (park position). The disc may be ejected when the ignition is off.

3. Press the OPEN/CLOSE hard-key to close the display. The display will close within 30 seconds after the disc is pulled from the mechanism.

Selecting Disc Mode

Toggle between the media and the radio menus by pressing the RADIO/MEDIA hard-key. The disc mode can be selected by touching the Disc tab soft-key.

Note: When a disc is inserted, the appropriate mode is automatically selected once the disc is recognized.

Scan Search

Touch the SCAN soft-key.

The individual tracks of the disc will be played in succession for 8 seconds each.

Select STOP SCAN soft-key to stop the scan function.



Next Track

Press the SEEK up hard-key. The next track on the disc is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.



Previous Track

Pressing the SEEK down hard-key plays the previous track. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 1 second when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed in the left center of the screen.

Select Title from list

Select LIST to display a list of the titles of the currently playing disc. Select the desired track you wish to play. Select HIDE LIST to hide the list.

Disc Info

Select INFO to display Title, Artist, Album, Genre information in the right half of the screen.
Select CLOSE INFO to close the information.

Gracenote Music Recognition Technology



This navigation radio is equipped with the Gracenote Music Recognition Service, with an embedded database to look up album, song title, genre and artist information. Data will be found for most Audio CDs (CDA discs). Data will not be found for DVDs or data discs (those with MP3 or WMA files).

Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

Note: Visit <http://www.chrysler.com/mygig/> for update information.

Copy Disc to Hard-Drive

Read about copying discs in the Hard Disk Drive section of this manual.

Disc Menu

While in disc mode with inserted audio disc, press the MENU hard-key to access the Disc Menu.

Select Random to play the titles on the disc in random order.
Select Random again to turn Random off.

Select Rpt. TRK to repeat the currently playing title. Touch the Rpt. TRK soft-key again to stop the repeat mode.

Playing a MP3/WMA Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.



A MP3/WMA disc may contain audio files in a folder structure. The folder, if any, are shown in the list view. Touch the LIST soft-key, if the list is not displayed.

3. Touch a soft-key with a folder symbol to open a folder.

 


4. Touch the BACK soft-key to close a folder.

Playing a Video DVD

To view a DVD video on the RER radio screen, the vehicle must be stopped.

Insert a video DVD first.

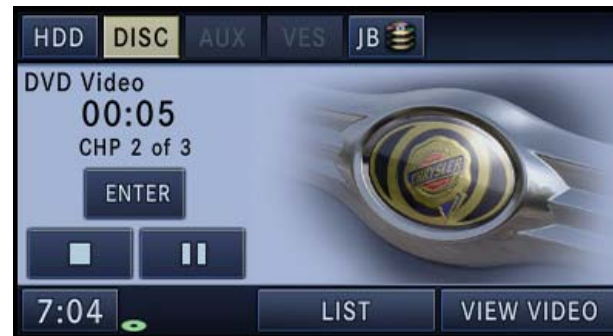

The playback starts automatically after the DVD video is recognized by the disc drive.

Touch the LIST soft-key to display a list of available chapters or tracks. Touch a chapter or track soft-key in the list to start playback from the selected section.


Touch the VIEW VIDEO soft-key to view the video on the screen.


DVD MENU Controls

If you insert a DVD video disc that contains a top menu, a menu may appear.



Touch the cursor arrows soft-keys to select the title you want to view, then touch the ENTER soft-key to start playback.


Touch the  soft-key to move the controls to the right part of the screen.


Touch the  soft-key to close the DVD MENU Controls.

DVD Playback Controls

In video playback mode touch anywhere on the screen to show the DVD playback controls.



To pause playback touch the  soft-key.


To stop playback touch the  soft-key.


Touch the  soft-key during playback to fast reverse playback.

Touch the  soft-key during playback to fast forward playback.

Touch the NEXT soft-key to locate succeeding chapters or tracks.

Touch the PREV soft-key to start playback from the beginning of the current chapter or track. When you press twice in quick successions, playback starts from the beginning of the preceding chapter or track.

Touch the  soft-key to move the controls to the right part of the screen.

Touch the  soft-key to close the DVD MENU Controls.

DVD Video Menu

While in disc mode with inserted video DVD, press the MENU hard-key to access the DVD Video Menu.



Touch the DVD Setup soft-key to access the DVD Setup menu.



In the DVD Setup menu you may select Menu Language, Audio Language, Subtitle, Camera Angle, Aspect Ratio, and Brightness settings by pressing the corresponding soft-key. Some of the soft-keys are disabled, if the inserted disc does not support the functionality.

Disc Skipping

Skipping is typically caused by a damaged (scratched) disc. This will result in a 10 second jump forward until the damaged area is passed.

Temperature Protection

If the temperature of the disc reader during operation becomes too high, a popup message will inform the user of an over temperature situation. The unit switches to radio mode until the disc reader temperature has dropped to a normal level.

Jukebox Mode (JB)

Overview

The jukebox can contain 12 favorite playlists of songs that reside on the internal hard disk drive.

The total capacity of the hard disk drive for music is about 6 gigabytes.

Selecting Jukebox Mode (JB)

Press the RADIO/MEDIA hard-key repeatedly until the Jukebox tab is shown on the screen. Touch the JB soft-key to access the Jukebox.



Touch the Jukebox Tab to activate the Jukebox mode.

Fill a Jukebox Album from Audio Disc

1. Touch the SHOW DISC soft-key to display a list of available albums.

Note: You cannot fill a Jukebox Album using a disc with MP3 and WMA files. To do this you must first copy the files to the HDD. Refer to the HDD mode in this manual.
When you open the Jukebox for the very first time, a popup menu gives you the option to fill the Jukebox.

 


2. Select an album slot by touching the corresponding ---NO ALBUM--- soft-key.

Note: Refer to the Edit Jukebox Album section in this manual in order to remove an album from the jukebox slot.



3. Touch the FROM DISC soft-key.
4. Touch the FROM DISC soft-key to open the display.
5. Insert the audio disc you would like to copy.
6. Touch the OK soft-key to confirm the copy process.

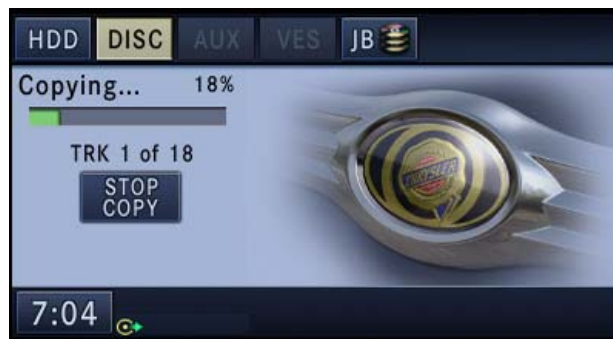

You may now switch to the DISC mode by touching the DISC soft-key tab to see the copy progress bar. Disc audio can not be heard in this mode.

Touch the COPY STOP soft-key to stop the copy process.

You may touch the JB soft-key tab after the first track is completed. The jukebox is able to start playing the copied tracks. The album soft-keys of unfinished tracks will be disabled until the track copy is complete.

You may remove the disc after all tracks are copied.

Fill a Jukebox Album from HDD Playlist

1. Touch the SHOW DISC soft-key to display a list of available albums.



2. Select an album slot by touching the corresponding ---NO ALBUM--- soft-key.

Note: Refer to the Edit Jukebox Album section in this manual in order to remove an album from the jukebox slot.



3. Touch the FROM LIST soft-key.
 4. Select an album from the Available Albums list by touching the soft-key with the corresponding album name.
- The selected album starts playing.

Clear a Jukebox Album Slot

1. Touch the JB soft-key tab to select the Jukebox mode.
2. Press the MENU hard-key to select the Jukebox Menu



3. Touch the Edit Jukebox soft-key.



4. Touch the CLEAR soft-key of the album you would like to remove.

Note: Clearing an album slot does not remove the playlist from the hard disk drive. Refer to the Edit a Playlist section in the HDD chapter in this manual.

Selecting a Jukebox Album (Playlist)

Touch the SHOW DISC soft-key to display a list of available albums.



Touch the album soft-key to select and play the desired album.

Touch the ---NO ALBUM--- soft-key to fill an empty album.

Touch the HIDE DISC soft-key to hide the album list.

Touch the LIST soft-key to display a list of songs in the currently playing album.



Selecting a Track

Touch the LIST soft-key to display a list of available tracks in the selected album.

Touch the soft-key with the desired song name to select and play the track.

Touch the HIDE LIST soft-key to hide the track list.

Next Track



Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.

Previous Track



Press the SEEK down hard-key. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 1 second when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Note: By pressing and holding the SEEK button, the track counter advances until the button is released.

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed on the left side of the screen.

Jukebox Menu

While in JB mode press the MENU hard-key to access the Juke Box Menu.

Random Playback

The random play function plays random tracks from the current album. Touch the Random soft-key to switch the random play function on or off.

A red check-mark indicates the active random play function in the Juke Box Menu.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check-mark indicates the active repeat track function in the Juke Box Menu.

Edit Jukebox

1. While in JB mode press the MENU hard-key to access the Juke Box Menu.



2. Touch the Edit Jukebox soft-key either to clear a jukebox albums slot, or to fill an empty album slot.



Note: The CLEAR soft-key in the Edit JukeBox menu does not delete the playlist from the hard disk drive.

Hard Disk Drive Mode (HDD)

 
The HDD mode gives you access to the audio files on the internal hard disk drive. It functions similar to a CD player, with the exception that the internal HDD can hold more tracks. It can hold approximately 1,600 four-minute CD-quality songs.

Before using the HDD mode, you will need to copy tracks to the internal hard drive.

The files will be stored on the internal hard disk drive and can be used in the HDD mode, or for Jukebox albums.

Copy Audio Disc to Hard-Drive

1. Insert a disc.

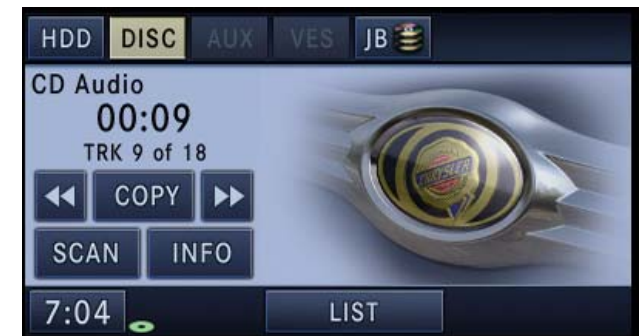

2. Touch the Copy soft-key to copy music tracks of the inserted disc to the hard disk drive.

During the copy process, the disc player cannot play audio.



The copy progress is shown in the display.

It is possible to listen radio modes during this process. Copying time is greater than 5x the normal playback rate.

Note: When copying CD-Audio to HDD, audio files are converted from CD Audio to WMA. DVD-Audio cannot be copied to the HDD.

Copy WMA/MP3 Files to Hard-Drive

You can copy MP3, and WMA formatted compressed audio files from a disc or via USB (e.g., USB stick).

It is recommended to sort music files into folders.

Example:

MP3DISC	
Name	Kind
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.wma	Audio File
▼ My Playlist Folder 1	Folder
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.mp3	Audio File

Songs located in the root level (top level) of the disc or USB device are saved in a playlist named Root_Level_Songs.

Once the songs are copied, the playlist will be named by the originating folder name.

For the example above the list on the HDD will show the following:

Disc_Root_Level Songs (Playlist 1)

- Song 1.mp3 (First song in playlist 1)
- Song 2.mp3 (Second song in playlist 1)
- Song 3.wma (Third song in playlist 1)

My Playlist Folder 1 (Playlist 2)

- 01 Song.mp3 (First song in playlist 2)
- 02 Song.mp3 (Second song in playlist 2)
- 03 Song.mp3 (Third song in playlist 2)

Copying complete Disc

1. Insert a disc with MP3, WMA files.



2. Touch the Copy soft-key to copy music files of the inserted disc to the hard disk drive.

During the copy process, the disc player cannot play audio.



The copy progress is shown in the display.
It is possible to listen radio modes during this process.

Selective Song Copying from disc

You can select specific songs on a WMA/MP3 disc using the following procedure:



1. While in the DISC mode press the MENU hard-key to access the settings menu.



2. Touch the My Files soft-key.



3. Select My Music.



4. Touch the Import Music Files soft-key.
5. Touch the From DISC soft-key in the next screen .



 
6. Select the folders or titles you would like to copy.
A red check-mark indicates the selected songs and/or folders.
Touch the ALL soft-key to select all files and folders at once.
7. Touch the DONE soft-key to start the copy process.
The copy process is shown on the display. It is possible to listen to radio modes during this process.
If you unplug or eject the media before the copying process is finished, the process will be interrupted. You may restart the copying process by repeating the steps above.

Copying from USB

1. Insert a USB device.



2. Select My Music.

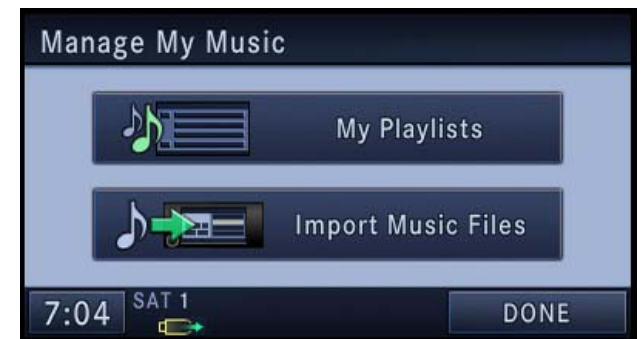

3. Touch the Import Music Files soft-key.

4. Touch the From USB soft-key in the next screen.



 
5. Select the folders or titles you would like to copy.

A red check-mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.

6. Touch the DONE soft-key to start the copy process.


Playing Audio Files from the Hard Disk Drive

You can play songs directly from the internal hard disk drive.

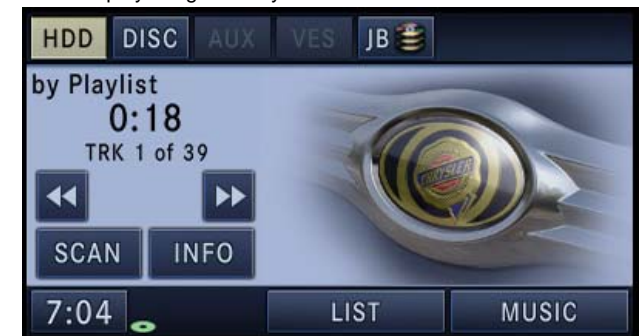

1. Touch the MUSIC soft-key to select an available category.

 The navigation radio can sort the files by playlist, by song name, by artist, by genre, by album, or by year.

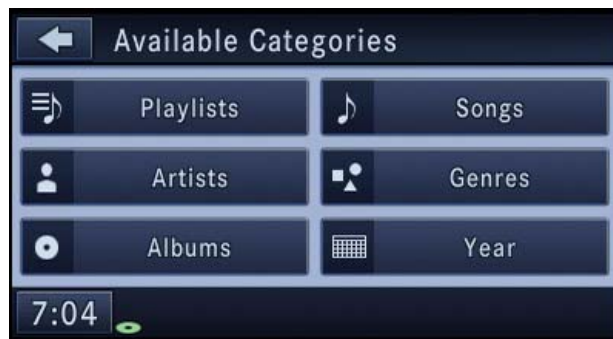

2. Touch for this example the Playlists soft-key or the desired category soft-key.



3. Touch a soft-key with the desired playlist name to play a playlist.

Touch the PLAY ALL PLAYLISTS soft-key to play all available playlists.



Next Track

Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track. If a track has been playing for more than 10 seconds when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track, instead of jumping to the previous track.



Previous Track

Press the SEEK down hard-key. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 10 seconds when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed on the left side of the screen.

HDD Menu

While in HDD mode, press the MENU hard-key to access the HDD Menu.

Random Playback

The random play function plays random tracks from the hard disk drive. Touch the Random soft-key to switch the random play function on or off.

 
A red check-mark indicates the random play function is active.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check-mark indicates the repeat track function is active.

Editing Playlists on the Hard Disk Drive

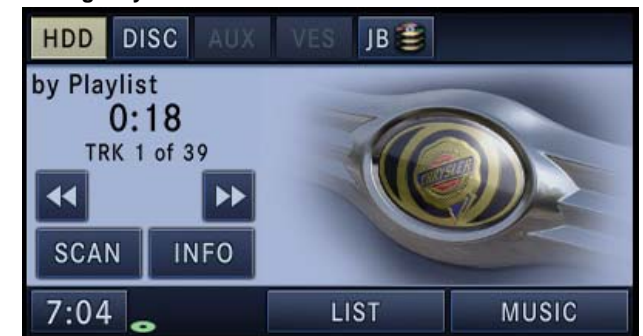

1. While in the HDD mode press the MENU hard-key to access the HDD Menu.



2. Touch the My Files soft-key.



3. Select My Music.



4. Touch the My Playlists soft-key.



5. Touch the EDIT soft-key (example: DISC_Root_Level_Songs) of the playlist you would like to edit.

You can rename the selected playlist, delete songs from the selected playlist, or delete the selected playlist.



 
6. Touch the Rename This Playlist soft-key.

Note: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it, will be permanently deleted. Neither song nor playlist can be recovered.



7. Type in a new name for the playlist.

8. Touch the SAVE soft-key to confirm the name.

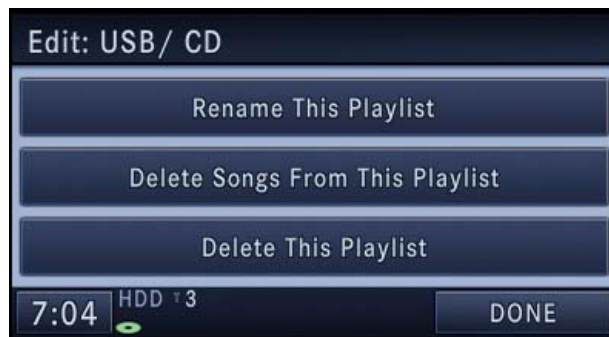

The playlist now has the new name.

9. Touch the Delete Songs From This Playlist soft-key.

Note: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it, will be permanently deleted. Neither song nor playlist can be recovered.



10. Select the titles you would like to delete.

A red check-mark indicates the selected songs.

 
11. Touch the DELETE soft-key to start the delete process.

Note: If you delete a song from the playlist, the song cannot be recovered.

12. Touch the DONE soft-key, when you are done editing the playlist.

Deleting All Playlists from the Hard Disk Drive

1. Press the MENU hard-key on the right side of the radio.
2. Touch the System Setup soft-key to access the System Setup menu.
3. Touch the Manage HDD soft-key to access the Manage HDD menu.

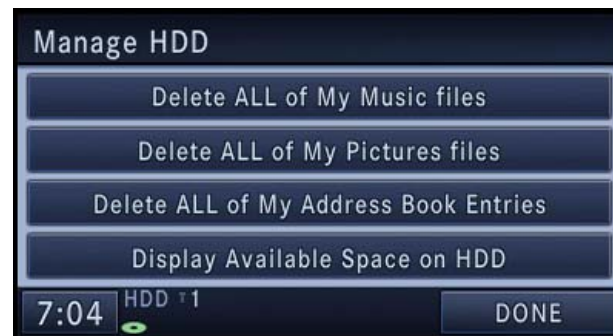


This menu displays the available space on the hard disk drive, and allows you to delete pictures, music files, and address book entries.

Importing Pictures

It is possible to import display pictures to the internal hard disk drive. The pictures can be displayed on the right half of the radio screen.

 Warning: It is not possible to copy files of a USB device while the vehicle is in motion.

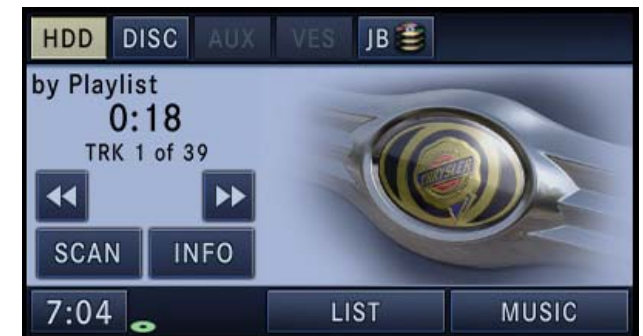

In the default mode, the vehicle brand logo is displayed in the right half of the screen. Press the Menu hard-key on the right side of the radio to access one of the setting menus.

It is recommended to change the picture dimensions on a PC or Digital Camera to 240 by 158 pixels before the import.

Note: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.



1. Touch the My Files soft-key to go to the Manage My Files Screen.



2. Touch the My Pictures soft-key to get an overview of the currently stored images.



 
The navigation radio can store 8 user pictures.

3. Press one of the Add Picture soft-keys.

4. Insert either a CD or a USB Stick containing your pictures.



5. Select the type of media inserted.

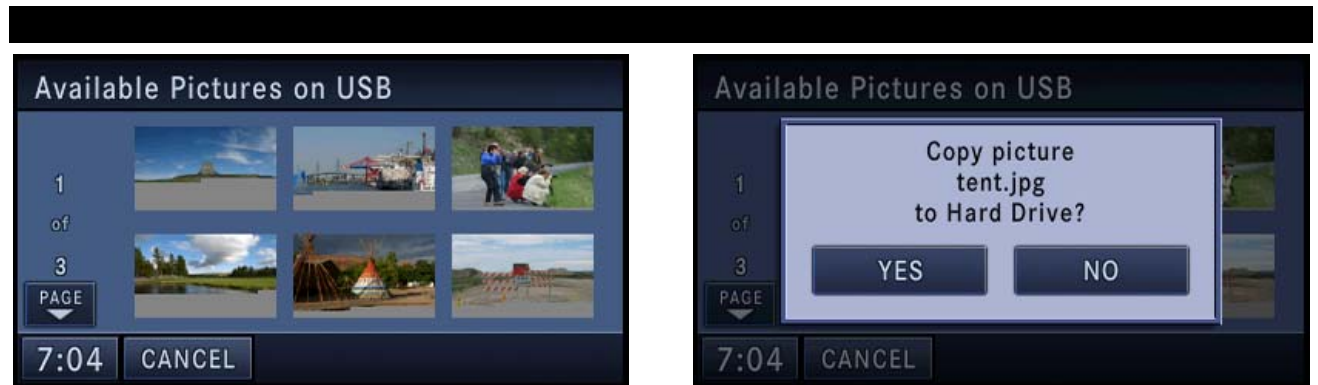

6. Use the PAGE soft-keys to page through a list of pictures and press the picture you would like to import.

Note: Files must be in the root directory (top level) of the disc or USB device to be recognized.

7. Confirm your selection by touching the YES soft-key.



The imported picture is now available in the Manage My Pictures screen.

8. In order to display the imported picture in the radio screen, touch the desired picture soft-key.



9. Select this picture by pressing the Picture View soft-key. A check-mark indicates the currently used picture.

Use the PREV or NEXT soft-key to step through the list of available pictures.

Touch the DELETE soft-key to delete the picture from the hard disk drive.

10. Press the MENU hard-key twice and then touch the Picture View soft-key to enable the picture view.



The picture is now displayed on the right half of the screen.

Remote Devices

Vehicle Entertainment System™(VES)

The navigation radio can remotely control the VES. Refer to the VES user's manual for more information.

Receiving audio/video from the VES

You can play audio from the VES through the vehicles speaker system. If you have a VES with a video player, you can also see the video on the radios display, if the vehicle is parked.



The VES tab becomes available after the VES system is turned on. Touch the VES MODES soft-key to select the VES audio source.



Touch the soft-key with the desired source to play the selected source in the vehicle cabin.

Availability of the DVD Player soft-key, the Rear AUX 1 soft-key, and the Rear AUX 2 is based on the type of VES in the vehicle.

DVD Player is not available if there is no DVD player in the VES or there is no DVD in the player.

A device must be plugged in to the AUX jack of the VES to be available.

A disabled soft-key indicates an unavailable source. In this example the VES DVD Player is not available, and the Rear AUX 2

audio is playing on the navigation radio. You can play the VES source through the navigation radio sound system.

Sending audio/video and controlling the VES

The navigation radio can also control the VES.

All sources are played through the VES headphones.

Refer to the VES user's manual for more information on controlling the rear VES through the remote control.

To access the rear VES press the MENU hard-key on the right side of the radio.



Touch the Rear VES soft-key to display the Rear VES Controls.




The Rear VES Controls are displayed in the right half of the screen.

Note: Press the HIDE LIST soft-key, and/or the CLOSE INFO soft-key, if you cannot see the Rear VES Controls.

The upper row of tabs controls the headset audio channels 1, or 2. The third tab controls the VES on/off button.

A VES headset can listen to either audio channel 1 or audio channel 2.

 Touch the soft-key-tab 1 to select channel 1. In this example channel one plays the FM RADIO tuner au-

dio.

The left half of the screen displays the audio source information, which is in this case the radio frequency 87.7 MHz of Preset 1. Touch the LIST soft-key to display the selected source details.



In this case the FM preset list within the selected tuner is displayed.

You may touch a preset soft-key to change the station, or touch the DIRECT TUNE soft-key to enter a frequency, or press the SEEK up or SEEK down hard-keys to change the radio station.

2 Touch the 2 soft-key-tab to set the desired audio source for the second VES audio channel. In this example channel two plays MEDIA from the HDD.



The left half of the screen displays the audio source information, which is in this case track 19 of a playlist on the HDD of the navigation radio.

Touch the LIST soft-key to display the selected source details.



In this case the songs within the selected playlist are displayed.

 


The RADIO soft-key controls the AM/FM tuner, and the SAT tuner of the navigation radio.

Note: The navigation radio cannot play both AM or FM at the same time.

The MEDIA soft-key controls the HDD, DISC, and AUX audio source of the navigation radio.

The VES soft-key controls the DVD Player, Rear AUX 1, and Rear AUX 2 of the VES system.



Touch the on/off soft-key-tab to show the VES ON/OFF display. You may turn the VES system on or off.



Touch the Turn Rear VES OFF soft-key to shut the VES off.
Touch the Turn Rear VES ON soft-key to turn the VES on.

VES LOCK

 
Press the LOCK soft-key to disable the controls on the VES remote control unit. Once the VES is locked, it is not possible to use the VES controls or the VES remote control.

VES UNLOCK

Press the UNLOCK soft-key to enable the controls on the VES remote control unit.

Playing a Video DVD for the rear VES

1. To view a DVD video on the rear VES radio screen, insert a video DVD.

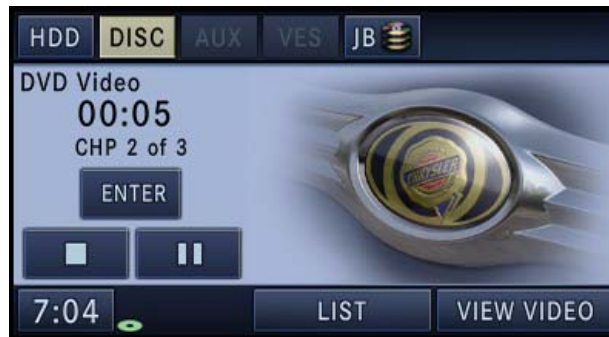

The playback starts automatically after the DVD video is recognized by the disc drive.

2. Press the MENU hard-key on the right side of the radio.



3. Touch the Rear VES soft-key to display the Rear VES Controls.

4. Touch the 1 soft-key-tab to select audio channel 1.





5. Touch the MEDIA soft-key to select the media mode.
6. Touch the DISC soft-key to select the disc player.
7. Touch the PLAY VIDEO soft-key to start the video playback.

USB Connector

It is possible to transfer audio files or pictures files to the navigation radio. Files can be on a disc or on a USB device (e.g., USB stick). The USB connector is covered by a small cover, which protects the connector from dust or damage.

Note: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.

The transfer speed for this USB connector is approximately 2 megabytes per second.

MP3 player devices cannot be controlled through the USB connector. Some player devices save music files in MP4 format, which cannot be played in this radio. Some copy protected music (e.g., downloads from the internet) cannot be played on this radio.

Compatible devices

Please see your DaimlerChrysler Dealership or visit <http://www.chrysler.com/mygig/> for supported devices.

Note: Some MP3 Player do not allow songs to be copied into other devices.

How to open the cover



 
1. Place finger under the pull arrow.

How to close the cover



2. Pull forward.


Note: The flap is attached and should not be removed! Do not pull off of the frame. Do not use a tool (e.g. screw driver, nail file, etc.) to open the flap, as this could cause damage to the face of the radio.

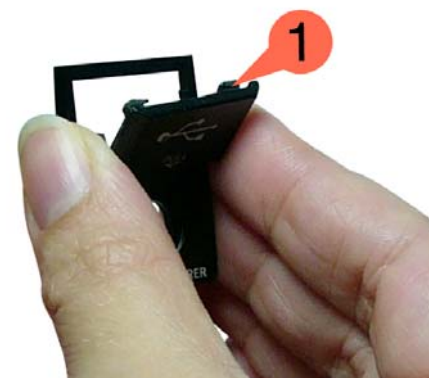

1. Using your thumb and index finger, grasp the flap. Notice the hooks (1), which must first be inserted into the frame.



 2. Hook the top hooks (1) into the frame first.

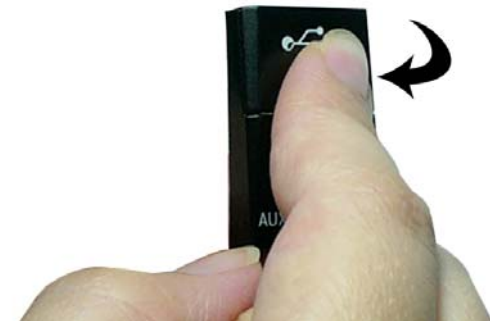

3. Then push on the bottom of the flap, to secure in place.

Caution: Never force any connector into the ports of your radio. Make sure your connectors are the identical shape and size before you connect.

AUX Mode

The AUX connector allows you to connect the headset output of an audio device (e.g., MP3 player) to the navigation radio. The audio of the connected device will then be played through the navigation radio sound system.



Connect a 3.5 mm *stereo* mini-jack cable as shown above (not provided with the radio) to the AUX connector on the navigation radio and to the earphone connector of your audio device.

The display will switch automatically to the AUX mode, when a 3.5 mm *stereo* mini-jack cable has been connected. The radio screen will revert back to the last tuner mode when the cable is unplugged.

To change radio modes while the cable is connected to the unit, press the RADIO/MEDIA hard-key until the AUX tab is displayed on the top of the screen. Touch the AUX tab to return to the AUX mode.

Adjust the volume with the ON/OFF VOLUME knob, or with the volume of the attached device.

The control of the external device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead.

Note: Inserting of a *mono* jack will result in improper audio playback.

Speech Dialogue System

Voice Recognition System (VR)

This Voice Recognition System allows you to control your AM and FM radio, satellite radio, disc player, navigation system, hard disk drive storage, and a memo recorder.

WARNING: Any voice commanded system should be used only in safe driving conditions and all attention should be kept on the road-way ahead. In a stressful situation, take care to speak into the Voice Interface System as calmly and normally as possible. The ability of the Voice interface System to recognize user voice commands may be negatively affected by rapid speaking or a raised voice level.

When you press the VR hard-key, you will hear a beep. The beep is your signal to give a command.

Note: If you do not say a command within a few seconds, the system will present you with a list of options.

You can always recall the help menus by saying HELP.

If you ever wish to interrupt the system while it lists options, press the VR hard-key, listen for the beep, and say your command.

Pressing the VR hard-key while the system is speaking is known as "barging in". The system will be interrupted and you can add

or change commands. This will become helpful once you start to learn the options.

Note: At any time you can say the words CANCEL, REPEAT, HELP, or MAIN MENU.

These commands are universal and can be used from any menu or screen. For other universal commands, refer to the command section in this manual.

All other commands can be used depending upon the active application.

For example: If you are in the navigation menu and you are listening to FM radio, you can speak commands from the navigation menu or from the FM radio menu.

When using this system, you should speak clearly and at a normal speaking volume.

The system will best recognize your speech if the windows are closed, and the heater- / air-conditioning fan is set to low.

At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.

To hear the first available Menu, press the VR hard-key and say HELP or MAIN MENU.

Display Menu

In addition to audible help, the navigation radio is able to display the most important available commands on the screen.

Note: Press the green voice recognition help screen to CANCEL the currently active voice command session.



Commands

The Voice Recognition understands two types of commands. Global commands are available at all times. Local commands are available if the supported radio mode is active.

Changing the volume

1. Start a dialogue by pressing the VR hard-key.
2. Say a command (e.g., HELP).
3. Use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the voice recognition system is speaking.

Main Menu

Start a dialogue by pressing the VR hard-key.

You may say MAIN MENU to switch to the SDS main menu.

In this mode you can say the following commands:

- RADIO (to switch to the radio mode)
- HARD DRIVE (to switch to the HDD mode)
- DISC (to switch to the disc mode)
- VES (to switch to the VES mode)
- MEMO (to switch to the memo recorder)
- NAVIGATION (to switch to the navigation mode)
- SYSTEM SETUP (to display the system setup menu)

Radio Menu

You may say RADIO to switch to AM, FM, or SAT.
Say RADIO MENU.

In this mode you may say the following commands:

- RADIO AM (to switch to the AM band)
- RADIO FM (to switch to the FM band)
- SATELLITE RADIO (to switch to the satellite radio)

Radio AM

To switch to the AM band say AM or RADIO AM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Radio FM

To switch to the FM band say FM or RADIO FM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)

- MAIN MENU (to switch to the main menu)

Satellite Radio

To switch to satellite radio mode say SAT or SATELLITE RADIO.

In this mode you may say the following commands:

- STATION (1-250) (to change the station)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- LIST STATIONS (to hear a list of available stations)
- SELECT NAME (to say the name of a station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Disc

To switch to the disc mode say DISC.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

Hard Drive

To switch to the HDD mode say HARD DRIVE.
In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

VES

To switch to the VES mode say V E S.
In this mode you may say the following commands:

- VES
- VES REMOTE LOCK (to lock the VES remote)

Memo

To switch to the voice recorder mode say MEMO.
In this mode you may say the following commands:

- NEW MEMO (to record a new memo)

During the recording you may press the VR hard-key to stop recording. You continue by saying one of the following commands:

- SAVE (to save the memo)
- CONTINUE (to continue recording)
- DELETE (to delete the recording)
- PLAY MEMOS (to play previously recorded memos)

During the playback you may press the VR hard-key to stop playing memos. You continue by saying one of the following commands:

- REPEAT (to repeat a memo)
- NEXT (to play the next memo)
- PREVIOUS (to play the previous memo)
- DELETE (to delete a memo)
- DELETE ALL (to delete all memos)

Note: Keep in mind that you have to press the VR hard-key first and wait for the beep, before speaking the "bargain in" commands.

Navigation

To switch to the navigation mode say NAVIGATION.

Note: Not all commands will be available at all times, depending upon the system context.

Note: Read the navigation chapter first, to help you understand the functionality of the available commands.

You may say:

- DESTINATION ENTRY
 - GUIDE ME TO A NAME
 - STREET ADDRESS
 - .. INPUT COUNTRY
 - .. INPUT STATE

<ul style="list-style-type: none"> <ul style="list-style-type: none"> .. INPUT CITY NAME .. INPUT STREET NAME .. INPUT HOUSE NUMBER - POI <ul style="list-style-type: none"> .. FIND NEARBY POI .. FIND POI NEAR DESTINATION .. FIND WITHIN A CITY .. INPUT PHONE NUMBER .. SELECT POI ICONS - ADVANCED INPUT <ul style="list-style-type: none"> .. INPUT ZIP CODE .. INTERSECTION .. CANCEL DESTINATION ENTRY - RECENT DESTINATIONS • ROUTING OPTIONS <ul style="list-style-type: none"> - GO - STOP ROUTING - MUTE GUIDANCE - REPEAT GUIDANCE - CHANGE METHOD <ul style="list-style-type: none"> .. FASTER ROUTE .. SHORTER ROUTE • TRAVEL INFO • MAP 	<ul style="list-style-type: none"> • ADDRESS BOOK <ul style="list-style-type: none"> - NEW ENTRY - NAVIGATE TO A NAME - DELETE - ERASE ALL System Setup <p>To switch to the system setup say SETUP.</p> <p>You can say:</p> • LANGUAGE <ul style="list-style-type: none"> - ENGLISH - SPANISH - FRENCH • VOICE TRAINING • HELP SCREEN <ul style="list-style-type: none"> - ON - OFF • TUTORIAL
--	--

Voice Training

For users experiencing difficulty with the system recognizing their voice commands or numbers, the UConnect system Voice Training feature may be used.

1. Press the VR hard-key.
2. Say VOICE TRAINING.

This will train your own voice to the system and will improve recognition.

Repeat the words and phrases when prompted by the UConnect System. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched off.

This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

If the system does not understand the words VOICE TRAINING:

1. Press the MENU hard-key.
2. Press System Setup.
3. Press the Voice Recognition hard-key to access the Voice Recognition menu.

Note: Voice Training does not alter the capability of the system to recognize other people's voices. It gives the recognition system additional information about your voice.



- Touch the Show Help Screens During VR Sessions to show or hide the help screens when using the speech dialog system.
- Touch the Reset VR System to Factory Defaults when you would like to restore the Voice recognition system to factory default settings.
- Touch the Start Voice Training soft-key to train the voice recognition system.

- Touch the Listen to Tutorial soft-key to hear instructions on voice training.

Note: With rolled down windows, the system performance may be compromised.

In a convertible vehicle, the system performance may be compromised with roof top down.

The Rear view mirror top should be at least 1/2 inch below the overhead console.

Hands Free Cellular Telephone

UConnect™ Overview

UConnect™ is a voice-activated, hands-free, in vehicle communications system. UConnect™ allows you to dial a phone number with your cellular phone using simple voice commands (e.g., "Call" ... "Jim" ...Work" or "Dial" ... "248-555-1212"). Your cellular phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the UConnect™ system.

Compatible Phones

See the UConnect™ site on <http://www.chrysler.com/mygig/> for a current list of compatible cellular phones and any limitations your phone might have.

Warning: Any voice commanded system should only be used in safe driving conditions and your attention should be kept on the road ahead.

If your cellular phone supports a different profile (e.g., Headset Profile), you may not be able to use any UConnect™ features. Refer to your cellular service provider or the phone manufacturer for details.

The UConnect™ system is fully integrated with the vehicle's navigation radio audio system. The volume of the UConnect™ system can either be adjusted from the radio volume control knob, or from the steering wheel radio control, if so equipped.

The radio display will be used for visual prompts from the UConnect™ system such as "Incoming Call", duration of the call, or caller ID.

UConnect™ allows you to transfer calls between the system and your cellular phone as you enter or exit your vehicle, and enables you to mute the system's microphone for private conversations.

The UConnect™ phonebook enables you to store up to 500 names and four numbers per name.

Bluetooth

This system is driven through your Bluetooth™ Hands-Free profile cellular phone. UConnect™ features Bluetooth™ technology – the global standard that enables different electronic devices to connect to each other without wires or a docking station, so UConnect works no matter where you stow your cellular phone (be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's UConnect™ sys-

tem. The UConnect™ system allows up to seven cellular phones to be linked to the system. Only one linked (or paired) cellular phone can be used with the system at a time.

See <http://www.bluetooth.org> for more information on bluetooth.

UConnect™ microphone

The rearview mirror contains the microphone for the system and the radio has the two control hard-keys that will enable you to access the system.

Please remember, the UConnect™ system works best when you talk in a normal conversational tone, as if speaking to some one sitting eight feet away from you.

Say phone numbers as you normally would with a pause between the sets of digits. Speak aloud names as you would normally.

If the system does not recognize one of your commands, you will be prompted to repeat it.

If you have trouble with recognition, you should press the VR hard-key, then say Voice Training. This will train your own voice to the system and will improve recognition.

You may always exit the system by saying CANCEL. Other universal commands include HELP and MAIN MENU.

Operations

Voice commands can be used to operate the UConnect™ system and to navigate through the UConnect™ menu structure. Voice commands are required after most UConnect™ system prompts. You will be prompted for a specific command and then guided through the available options.

UConnect™ hard-key

When you press the UConnect™ hard-key you will hear the word UConnect™ followed by a BEEP. The beep is your signal to give a command.

Note: If nothing is said within a few seconds, the system will present a list of menu options.

Listen to the choices and give your command after the beep.

Barge In – Overriding Prompts

The 'Voice Recognition' button can be used when you wish to skip part of a prompt and issue your voice recognition command immediately. For example, if a prompt is playing "Would you like to pair a phone, clear a...", you could press the 'VR hard-key and say "Pair a Phone" to select that option without having to listen to the rest of the voice prompt.

Pressing the VR hard-key while the system is speaking is known as "barging-in". Barging-in must be done with the VR hard-key.

Help Command

If you need assistance at any prompt or if you want to know what your options are at any prompt, say "Help" following the beep. The UConnect™ system will play all the options at any prompt if you ask for help.

To activate the UConnect™ system from idle, simply press the UConnect™ hard-key and follow audible prompts for directions. All UConnect™ system sessions begin with a press of the UConnect™ hard-key.

Cancel Command

At any prompt, after the beep, you can say "Cancel" and you will be returned to the main menu. However, in a few instances the system will take you back to the previous menu.

Pair (Link) to a Cellular Phone

To begin using your UConnect™ system, you must pair your compatible Bluetooth™ enabled cellular phone (refer to "Introduction" section to learn about the phone type). To complete the pairing process, you will need to reference your cellular phone owner's manual. One of the following vehicle specific websites may also provide detailed instructions for pairing with the brand of phone that you have:

www.chrysler.com/uconnect or www.dodge.com/uconnect or www.jeep.com/uconnect

Phone pairing can either be done using the touch screen (see Getting Started section in this manual) or using voice commands.

Pairing will walk you through a series of steps that will establish a connection between your handset and the UConnect™ system in the vehicle.

Once set up, you do not need to re- pair your phone with each use. However, every new phone must be paired before it can be used.

The following are general phone to UConnect™ System voice pairing instructions:

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONE PAIRING.
4. When prompted, after the beep, say PAIR A PHONE and follow the audible prompts.
5. You will be asked to say a four-digit pin number which you will later need to enter into your cellular. You can enter any four-digit pin number. You will not need to remember this pin number after the initial pairing process.
6. The UConnect™ system will then prompt you to begin the cellular phone pairing process on your cellular phone. Before attempting to pair phone, please see your cellular phone's user manual (Bluetooth section) for instructions on how to complete this step.
7. For identification purposes, you will be prompted to give the UConnect™ system a name for your cellular phone. Each cellular phone that is paired should be given a unique phone name.
8. You will then be asked to give your cellular phone a priority level between 1 and 7, 1 being the highest priority.

You can pair up to seven cellular phones to your UConnect™ system. However, at any given time, only one cellular phone can

be in use, connected to your UConnect™ System. The priority allows the UConnect™ system to know which cellular phone to use if multiple cellular phones are in the vehicle at the same time.

For example, if priority 3 and priority 5 phones are present in the vehicle, the UConnect™ system will use the priority 3 cellular phone when you make a call. You can select to use a lower priority cellular phone at any time (refer to “Advanced Phone Connectivity” section).

Dial by Saying a Number

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say DIAL.
4. When prompted, after the beep, say the number you want to call.

For example, you can say “234-567-8901.” The phone number that you enter must be of valid length and combination. Based on the Country in which the vehicle was purchased, the UConnect™ limits the user from dialing invalid combination of numbers. For example, in USA, 234-567-890 is nine digits long, which is not a valid USA phone number - the closest valid phone number has ten digits.

5. The UConnect™ system will ask you to confirm the phone number and then dial. The number will appear in the display of the navigation radio.

Call by Saying a Name

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say CALL.
4. When prompted, after the beep, say the name of the person you want call.

For example, you can say “John Doe,” where John Doe is a previously stored name entry in the UConnect™ phonebook. Refer to section “Add Names to Phonebook,” to learn how to store a name in the phonebook.

5. The UConnect™ system will ask you to confirm the name and then dial the corresponding phone number, which will appear in the display of the navigation radio.

Phone Book

Accessing the phone book can either be done using the touch screen (see Address Book section in this manual) or using voice commands.

The UConnect™ PHONE BOOK accesses the same database as the navigation radios ADDRESS BOOK.

Add Names to Phonebook

Adding names to phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say NEW ENTRY.

Use of long names helps the voice recognition and is recommended. For example, say "Robert Smith" or "Robert" instead of "Bob."

5. When prompted, enter the number designation (e.g.: "Home," "Work," "Mobile," or "Pager"). This will allow you to store multiple numbers for each phonebook entry, if desired.

6. When prompted, confirm the phone number for the phonebook entry that you are adding.

7. After you are finished adding an entry into the phonebook, you will be given the opportunity to add more phone numbers to the current entry or to return to the main menu.

The navigation radio will allow you to enter up to 500 names in the phone book with each name having addresses, and up to four associated phone numbers, and designations.

Voice Tags

In step 4 of the Add Names to Phonebook section, the navigation radio is recording your voice. The recording is called Voice Tag. You may edit, delete, or listen to the voice tag in the contact information menu (refer to the Address Book section in this manual for more details).

Note: Only voice tags are saved in regards to the currently selected system language setting. If you switch the language, your voice tag may not be available.

Edit Phonebook Entries

Editing names in the phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say EDIT ENTRY.
5. You will then be asked for the name of the phonebook entry that you wish to edit.
6. Next, choose the number designation (home, work, mobile, or pager) that you wish to edit.
7. When prompted, recite the new phone number for the phonebook entry that you are editing.

After you are finished editing an entry in the phonebook, you will be given the opportunities to edit another entry in the phonebook, call the number you just edited, or return to the main menu.

"Phonebook Edit" can be used to add another phone number to a name entry that already exists in the phonebook. For example, the entry John Doe may have a mobile and a home number, but you can add John Doe's work number later using the "Phonebook Edit" feature.

Delete Phonebook Entry

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say DELETE ENTRY.
5. After you enter the Phonebook Delete menu, you will then be asked for the name of the entry that you wish to delete.
You can either say the name of a phonebook entry that you wish to delete or you can say "List Names" to hear a list of the entries in the phonebook from which you choose.
6. To select one of the entries from the list, press the "Voice Recognition" hard-key while the UConnect™ system is speaking the desired entry and say DELETE.
After you enter the name, the UConnect™ system will ask you which designation you wish to delete: home, work, mobile, pager or all.
7. Say the designation you wish to delete.

Delete/Eraser "All" Phonebook Entries

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say ERASE ALL.
5. The UConnect™ system will ask you to verify that you wish to delete all the entries from the phonebook.

After confirmation, the phonebook entries will be deleted.

List All Phonebook Names

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say LIST NAMES.

The UConnect™ system will play the names of all the phonebook entries.

5. To call one of the names in the list, press the "Voice Recognition" hard-key during the playing of the desired name and say CALL.

Note: You can also exercise "Edit" or "Delete" operations at this point.

6. The UConnect™ system will then prompt you as to the number designation you wish to call.

7. The selected number will be dialed.

Phone Call Features

The following features can be accessed through the UConnect™ system if the feature(s) are available on your cellular service plan. For example, if your cellular service plan provides three-way calling, this feature can be accessed through the UConnect™ system. Check with your cellular service provider for the features that you have.

Answer or Reject an Incoming Call when no Call Currently in Progress:

When you receive a call on your cellular phone, the UConnect™ system will interrupt the vehicle audio system, and will ask if you would like to answer the call.

1. Press the UConnect™ button to accept the call.
2. To reject the call, press and hold the UConnect™ button until you hear a single beep indicating that the incoming call was rejected.

Answer or Reject an Incoming Call when another Call in Progress

If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your cell phone.

Press the UConnect™ button to place the current call on hold and answer the incoming call.

Note: The UConnect™ system compatible phones in market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only either answer an incoming call or ignore it.

Make a Second Call while another call is in Progress

1. To make a second call while you are currently in a call, press the VR hard-key.
2. Say DIAL or CALL followed by the phone number or phone-book entry you wish to call.
3. The first call will be on hold while the second call is in progress. To go back to the first call, refer to section "Toggling Between Calls."
4. To combine two calls, refer to section "Conference Call."

Place / Retrieve a Call from Hold

1. To put a call on hold, press the UConnect™ button until you hear a single beep which will indicate that the call has been placed on hold.
2. To bring the call back from hold, press and hold the 'Phone' button until you hear a single beep.

Toggle between Calls

If two calls are in progress (one active and one on hold), press the UConnect™ button until you hear a single beep indicating that the active and hold status of the two calls have switched. Only one call can be placed on hold at one time.

Conference Call

When two calls are in progress (one active and one on hold), press and hold the UConnect™ button until you hear a double beep indicating that the two calls have been joined into one conference call.

Three-Way Call

1. To initiate three-way calling, press the VR hard-key while a call is in progress.
2. Make a second phone call as described in section "Making a Second Call while Current Call in Progress."

3. After the second call has established, press and hold the UConnect™ button until you hear a double beep indicating that the two calls have been joined into one conference call.

Call Termination

1. To end a call in progress, momentarily press the UConnect™ button.

Only the active call/s will be terminated and if there is a call on hold, it will become the new active call.

2. If the active call is terminated by the far end, a call on hold may not become active automatically. This is cell phone dependent.

3. To bring the call back from hold, press and hold the UConnect™ button until you hear a single beep.

Redial

1. Press the UConnect™ hard-key to begin.

2. Wait for the beep.

3. Say REDIAL.

4. The UConnect™ system will call the last number that was dialed on your cellular phone.

Note: This may not be the last number dialed from the UConnect™ system.

Call Continuation

Call continuation is progression of a phone call on UConnect™ system after the vehicle ignition key has been switched to off. Call continuation functionality available on the vehicle can be any one of three types:

1. After ignition key is switched off, a call can continue on the UConnect™ system either until the call ends or until the vehicle battery condition dictates cessation of the call on the UConnect™ system and transfer of the call to the mobile phone.

2. After ignition key is switched to off, a call can continue on the UConnect™ system for certain duration, after which the call is automatically transferred from the UConnect™ system to the mobile phone.

3. An active call is automatically transferred to the mobile phone after ignition key is switched to off.

Emergency Assistance

If you are in an emergency and the mobile phone is reachable:

1. Pick up the phone and manually dial the emergency number for your area.
2. If the phone is not reachable and the UConnect™ system is operational, you may reach the emergency number as follows:
 1. Press the UConnect™ hard-key to begin.
 2. Wait for the beep.
 3. Say EMERGENCY.

The UConnect™ system will instruct the paired cellular phone to call the emergency number.

Note: The emergency number dialed is based on the Country where the vehicle is purchased (911 for USA and Canada, and 060 for Mexico). The number dialed may not be applicable with the available cellular service and area.

Note: The UConnect™ system does slightly lower your chances of successfully making a phone call as to that for the cell phone directly.

WARNING: Your phone must be turned on and paired to the UConnect™ system to allow use of this vehicle feature in emergency situations when the cell phone has network coverage and stays paired to the UConnect™ system.

Towing Assistance

If you need towing assistance,

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say TOWING ASSISTANCE.

Note: The Towing Assistance number dialed is based on the Country where the vehicle is purchased (800-528-2069 for USA, 877-213-4525 for Canada, 55-14-3454 for Mexico city and 800-712-3040 for outside Mexico city in Mexico).

Please refer to the 24-Hour Towing Assistance coverage details in the DaimlerChrysler Corporation 24-Hour Towing Assistance Program Guide.

Paging

To learn how to page, refer to section "Working with Automated Systems." Paging works properly except for pagers of certain companies which timeout a little too soon to work properly with the UConnect™ system.

Voice Mail Calling

To learn how to access your voice mail, refer to section "Working with Automated Systems."

Working with Automated Systems

This method is designed to be used in instances where one generally has to press numbers on the cellular phone keypad while navigating through an automated telephony system.

You can use your UConnect™ system to access a voicemail system or an automated service, such as, paging service or automated customer service. Some services require immediate response selection, in some instances, that may be too quick for use of UConnect™ system.

When calling a number with your UConnect™ system that normally requires you to enter in a touch-tone sequence on your cellular phone keypad, you can push the VR hard-key and say the sequence you wish to enter followed by the word "Send."

For example, if required to enter your pin number followed with a pound 3 7 4 6 #

1. Press the VR button

2. Say 3 7 4 6 # SEND

Saying a number, or sequence of numbers, followed by SEND is also to be used to navigate through an automated customer service center menu structure and to leave a number on a pager.

Turning Confirmation Prompts On/Off

Turning confirmation prompts off will stop the system from confirming your choices (e.g. the UConnect™ system will not repeat a phone number before you dial it).

1. Press the UConnect™ hard-key to begin.

2. Wait for the beep.

3. Say UCONNECT SETUP.

4. After the "Ready" prompt and the following beep, say CONFIRMATION PROMPTS.

5. The UConnect™ system will play the current confirmation prompt status and you will be given the choice to change it.

Phone and Network Status Indicators

If available on the radio and/or on a premium display such as the instrument panel cluster, and supported by your cell phone, the UConnect™ system will provide notification to inform you of your phone and network status when you are attempting to make a phone call using UConnect™. The status is given for roaming, network signal strength, phone battery strength, etc.

Dial Using the Cellular Phone Keypad

You can dial a phone number with your cellular phone keypad and still use the UConnect™ system (while dialing via the cell phone keypad, the user must exercise caution and take precautionary safety measures). By dialing a number with your paired Bluetooth™ cellular phone, the audio will be played through your vehicle's audio system. The UConnect™ system will work the same as if you dial the number using voice recognition.

Note: Certain brands of mobile phones do not send the dial ring to the UConnect™ system to play it on the vehicle audio system, so you will not hear it. Under this situation, after successfully dialing a number, the user may feel that the call did not go through even though the call is in progress. Once your call is answered, you will hear the audio.

Mute/Un-mute (Mute off)

When you mute the UConnect™ system, you will still be able to hear the conversation coming from the other party, but the other party will not be able to hear you.

In order to mute the UConnect™ system:

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say MUTE or MUTE ON.

In order to un-mute the UConnect™ system:

1. Press the UConnect™ hard-key to begin.

2. Wait for the beep.

3. Say UNMUTE or MUTE OFF.

Advanced Phone Connectivity

Transfer Call to Cellular Phone

The UConnect™ system allows ongoing calls to be transferred to your cellular phone without terminating the call.

To transfer an ongoing call from the UConnect™ system to your UConnect™ paired cellular

1. Press the 'VR hard-key (bargain-in).
2. Say TRANSFER CALL

The navigation radio starts playing the last used audio source, and you can continue your call on the cellphone.

Transfer Call to UConnect™ System

The UConnect™ system allows ongoing calls to be transferred to your cellular phone without terminating the call.

To transfer an ongoing call from the UConnect™ system to your UConnect™ paired cellular

1. Press the UConnect™ hard-key.

The navigation radio transfers the call immediately, and you can continue your call on the cellphone.

Automatic Transfer Call to UConnect™ System

If you have an ongoing call on a cellphone which was paired with the UConnect System before, and the navigation radio is off, turn on the ignition and allow the UConnect system to automatically transfer the call. This may take a few seconds.

List All Paired Cellular Phone Names

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say UCONNECT SETUP.
4. After the following beep, say PHONE PAIRING.
5. After the following beep, say LIST PAIRED PHONES.
6. The UConnect™ system will play the phone names of all paired cellular phones in order from the highest to the lowest priority.

To “select” or “delete” a paired phone being announced, press the VR hard-key and say SELECT or DELETE. Also, see next two sections for alternate way of doing this.

Select another Cellular Phone

You may select phones via touch screen in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).

This feature allows you to select and start using another phone with the UConnect™ system.

The phone must have been previously paired to the UConnect™ system that you want to use it with.

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say UCONNECT SETUP.
4. After the following beep, say SELECT PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to select.
6. You can also press the VR hard-key anytime while the list is being played.
7. Say the priority number choose select of the phone that you wish to select.

The selected phone will be used for the next phone call. If the selected phone is not available, the UConnect™ system will return to using the highest priority phone present in or near (approximately within 30 feet) the vehicle.

Delete UConnect™ Paired Cellular Phones

You may delete phones via touch screen in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).

This feature allows you to delete a phone from the UConnect™ system.

The phone must have been previously paired to the UConnect™ system that you want to delete it from.

1. Press the UConnect™ hard-key to begin.

2. Wait for the beep.

3. Say UCONNECT SETUP.

4. After the following beep, say DELETE PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to delete.

6. You can also press the VR hard-key anytime while the list is being played.

7. Say the priority number choose select of the phone that you wish to delete.

Things You Should Know About

Voice Recognition (VR)

- Always wait for the beep before speaking
- Speak normally, without pausing, just as you would speak to a person sitting approximately eight (8) feet away from you.
- Make sure that no one other than you is speaking during a voice recognition period.

- Performance is maximized under
 - low-to-medium blower setting
 - low-to-medium vehicle speed
 - low road noise
 - smooth road surface
 - fully closed windows
 - dry weather condition.

- Even though the system is designed for users speaking in North American English, French and Spanish accents, the system may not always work for some.

- When navigating through an automated system, such as, voice mail, or when sending a page, at the end of speaking the digit string, make sure to say SEND.

- Storing names in phonebook when vehicle is not in motion is recommended.

- It is not recommended to store similar sounding names in the UConnect™ phonebook.

- UConnect™ phonebook name tag recognition rate is optimized for the person who stored the name in the phonebook.

- You may say “O” (letter “O”) for “0” (zero). “800” may be spoken EIGHT ZERO ZERO.

- Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

Far End Audio Performance

- Audio quality is maximized under
 - low-to-medium blower setting,
 - low-to-medium vehicle speed,
 - low road noise,
 - smooth road surface,
 - fully closed windows, and
 - dry weather condition.
- Performance, such as, audio clarity, echo, and loudness to a large degree, rely on the phone and network, and not the UConnect™ system.
- Echo at far end can sometime be reduced by lowering the in-vehicle audio volume.

Bluetooth Communication Link

Cellular phones have been found to occasionally loose connection to the UConnect™ system. When this happens, the connection can generally be re-established by switching the phone

off/on. Your cell phone is recommended to remain in Bluetooth “on” mode.

Power-Up

After switching ignition key from off to either ON or ACC position, or after a language change reset, you must wait a few seconds prior to using the system.

Voice Tree - Main Menu

To initiate UConnect™, press the UConnect™ hard-key.

In this menu you may say the following commands:

- CALL
 - NAME
 - NUMBER
 - EMERGENCY
 - TOWING ASSISTANCE
- DIAL
 - NAME
 - NUMBER
 - EMERGENCY
 - TOWING ASSISTANCE
- PHONE BOOK
 - NEW ENTRY
 - EDIT ENTRY
 - LIST NAMES
 - DELETE
 - ERASE ALL
- REDIAL

- EMERGENCY
- TOWING ASSISTANCE
- UCONNECT SETUP

Voice Tree - Setup Menu

To initiate UConnect™, press UConnect™ Phone hard-key. After the system beep, say UCONNECT SETUP.

In this menu you may say the following commands:

- PHONE PAIRING
 - PAIR A PHONE
 - DELETE PHONE
 - LIST PAIRED PHONES
- CONFIRMATION PROMPTS
 - ON
 - OFF
- SELECT PHONE
- EMERGENCY
- TOWING ASSISTANCE

Navigation

General Notes

System Overview

Your navigation system receives GPS signals from up to 16 satellites to display the position of your vehicle. Map and database information is supplied through a hard disk drive. A gyroscope and the vehicles speed sensor enable the system to display the present vehicle position even in locations where GPS signals may be blocked.

When you input a destination, the navigation system uses map data from the hard disk drive to quickly calculate a route. As you drive along your chosen route, you are guided with pictorial displays and voice prompts.

Navigation Software

This navigation radio requires digital data from a Navigation Database. The data in the Navigation Database is licensed from Navigation Technologies®. Not all roads are digitized.

Software Updates

Visit <http://www.chrysler.com/mygig/> website or contact your DaimlerChrysler Dealership for the latest available software.

Navigation Database

The navigation unit is provided with a navigation database on the internal hard drive. The database contains data for the Continental USA, some of the major cities in Canada, Alaska, parts of Hawaii, and Puerto Rico.

WARNING: Drive with caution, paying attention to the road, obeying all traffic laws!

System Limitations

The map data that is included with your system is the most recent available at the time of production. Because of changes in streets, neighborhoods, and business locations, there may be situations where the navigation system is not able to route you to your desired destination by the entry method you have chosen. If this occurs, choose another entry method.

Selecting Navigation Mode

Press the NAV hard-key to toggle between Navigation MAIN MENU and Navigation MAP.

Navigation Main Menu

Selecting NAV Main Menu

1. If not already done, press the ACCEPT soft-key to agree to the Navigation Disclaimer.
2. Press the NAV hard-key to switch to the navigation menu and toggle between Map Viewer and Navigation Main Menu.



- Destination Entry

Touch this soft-key when you want to program a destination. (See the Destination Input section for details.)

- Recent Destinations

Touch this soft-key when you want to route to a destination you programmed before. (See the Destination Input section for details.)

- NAV Settings

Touch this soft-key when you want to adjust the settings of the navigation system. (See the Navigation Default Settings section for details.)

- Guide Me Home

Touch this soft-key when you want to route to your home destination. (See the Guide Me Home section for details.)

- Where Am I Now?

Touch this soft-key when you want to find out where you are, and when you need to search for available points of interest near to your current vehicle position. (See the Where Am I Now section for details.)

- My Trips

Touch this soft-key when you want to program or save trips with multiple destinations. (See the My Trips section for details.)

- Emergency Info

Touch this soft-key when you want to route to an emergency facility near to the current location of your vehicle. You may list fire stations, police stations, hospitals and Daimler-Chrysler dealerships. (See the Emergency Info section for details.)

- Record New Trail

Touch this soft-key when you want to record a trail in an area where no map is available. (See the Record New Trail section for details.)

- MAP

Touch this soft-key when you want to display a map of your current position. (See the Map Viewer section for details.)

Inputting Information

Names (e.g., city names or street names) are entered with a smart speller.



It is possible to spell only names contained in the database. Unavailable letters are in a lighter color and are not selectable. If the desired street name is shown completely touch the CONTINUE soft-key to proceed. If there are only a few choices left, you may touch the LIST soft-key to display a list of street names.

IMPORTANT NOTE: Use the space symbol as a space between words (e.g., NEW_YORK_CITY).

Note: Touch the DEL soft-key to delete a misspelled letter or press the NAV hard-key to go back to the navigation main menu.

Note: Touch the 0-9 soft-key to access numbers, and touch the MORE... soft-key to access special characters, if needed.

Warning: For your own safety and the safety of others, it is not possible to use the speller while the vehicle is in motion.

Destination Input

Press the NAV hard-key to access the NAV -Main Menu.



Touch the Destination Entry soft-key to get to the Destination Entry screen.

Note: Once you start the destination input you can touch the CANCEL soft-key to cancel the destination input process.

Overview Destination Entry Screen



At this point, you need to decide what type of destination you would like to enter.

A **Street Address** or a street name with house number.

Note: If you select a street without knowing a house number, the navigation radio will guide you to the closest end location on the entered street.

Intersection allows you to enter two street names.

Point of Interest allows you to select a destination from a list of locations and public places, or point of interest (POI). Search by place name, by phone number, by category or place type.

Use **City Center** if you want directions to a particular city. The navigation system will calculate a route with the destination at the center of the city.

Point on Map allows quick and easy selection of a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

Geo Coordinates

A geo coordinate is a coordinate used in geography.

You can determine a geo coordinate with the help of a handheld GPS receiver, a map, or the navigation system.

Use **Address Book** and **Saved Locations** are previously saved addresses or locations. Review the Address Book section in this manual to learn more about the address book.

Destination Input by Street Address

For this example we will continue by entering the following address 2101 CONSTITUTION AVE NW, WASHINGTON D.C., DC 20037, U.S.A.

1. Touch the Street Address soft-key to get to the Street Address menu.

The screenshot shows a 'Street Address' menu with a back arrow on the left and a Michigan flag on the right. The menu contains three input fields: 'Input street name in' with 'MICHIGAN' entered, 'Input city name in' with 'MI' and 'USA' as options, and 'Input Zip Code in' with 'USA' entered. At the bottom, there is a status bar showing '7:04' and four buttons: 'CANCEL', 'STATE', and 'COUNTRY'.

This menu shows the default country and state settings.

Changing State/Province and/or Country

If your destination is not in the displayed state and/or country either enter a city name, by touching the USA soft-key in the second row, or the ZIP code (if known), by touching the USA soft-key in the third row of the screen.

You can change the state/province and/or country temporarily for the current destination input by touching the STATE, PROVINCE, or COUNTRY soft-key in this menu.

Note: It is recommended to change the default state and/or default country, if you plan to enter more than 1 destination in the destination area (e.g. vacation, business travel, etc.).

2. If the COUNTRY is not set to USA, touch COUNTRY, and touch the USA soft-key for this example.

3. For this example touch STATE and change the state to Washington D.C.

Change State

Current: WASHINGTON D.C.

A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R
S	T	U	V	W	X	Y	Z	

7:04 CANCEL LIST

Enter W into the speller and select WASHINGTON D.C., DC from the list. Once selected, a CHANGE soft-key will appear in the lower right corner of the screen. Touch CHANGE to confirm your selection.

4. Once the country is set to USA and the state is set to WASHINGTON D.C., touch the WASHINGTON D.C. soft-key in the first row of the Street Address screen. This will allow you to input the street name in Washington D.C.

← Input Street Name DC

CONSTITUTION AVE NW 1 TOTAL

A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R
S	T	U	V	W	X	Y	Z	0-9
DEL	SPACE	-	&	/	.	MORE ...		

7:04 CANCEL CONTINUE

Touch the C soft-key in the speller, to enter the first letter of the street name (CONSTITUTION AVE NW). In the upper right corner, the number of possible roads decreases.

5. Touch the LIST soft-key to display a list of possible street names. Select CONSTITUTION AVE NW from the list to get to the Input Number menu.

← Input Number for: DC

2101

1	2	3	4	5	6	7	8	9
0								
								ABC ...
DEL	SPACE	-	&	/	.	MORE ...		

7:04 CANCEL CONTINUE

The speller displays only numbers contained in the digital map. 6. In this example we have entered 2101 as the house number. Touch the CONTINUE soft-key to get to the Confirm Route screen.

If you touch the CONTINUE soft-key without entering a number, the navigation system will guide you to a section of the entered street which is the closest to your current location.



In the Confirm Route screen the navigation radio displays the complete address, a map of the destination area, and the current routing method for you to verify.

Note: If the displayed address is not the desired address, you can either touch the BACK soft-key in the upper left corner of the screen to step back to the previous screens, press the NAV hard-key to start over from the NAV - Main Menu, or touch CANCEL to cancel the destination input.

7. Touch the GO soft-key to activate the route guidance. To read more about the OPTIONS soft-key in this menu, see the NAV Options section of this manual.

Destination Input by Intersection

For this example we will continue by entering the following intersection: Kaufman Ln and Bridwell Dr, in Louisville, Kentucky.

1. From the Destination Entry menu touch the Intersection soft-key to get to the Find Intersection menu.



Note: If Kentucky is not your default state refer to the change state/province and/or country section to learn how to change state/province and/or country).

It is possible to select the intersection within the whole country, a city, or a ZIP code area.

2. For this example touch the Within KENTUCKY soft-key.


The screenshot shows a navigation interface with a dark blue header bar. On the left is a back arrow icon, and on the right is 'KY' with a small US flag. Below the header, a light blue bar contains the text 'the State of KENTUCKY'. The main area has two text input fields: 'Enter Name of Street 1' and 'Enter Name of Street 2'. At the bottom, there is a status bar with '7:04' and a 'CANCEL' button.

3. Touch the Enter Name of Street 1 soft-key to enter the first street.

4. Enter "Kaufman Ln" into the speller and confirm the name.

This screenshot shows the same navigation interface as the previous one, but with 'KAUFMAN LN' entered into the 'Enter Name of Street 1' field. An ampersand (&) is displayed between the two input fields. The 'Enter Name of Street 2' field remains empty. The status bar at the bottom still shows '7:04' and a 'CANCEL' button.

 5. Touch the Enter Name of Street 2 soft-key to enter the second street. The navigation radio will display a list of possible cross streets of the initially entered street.

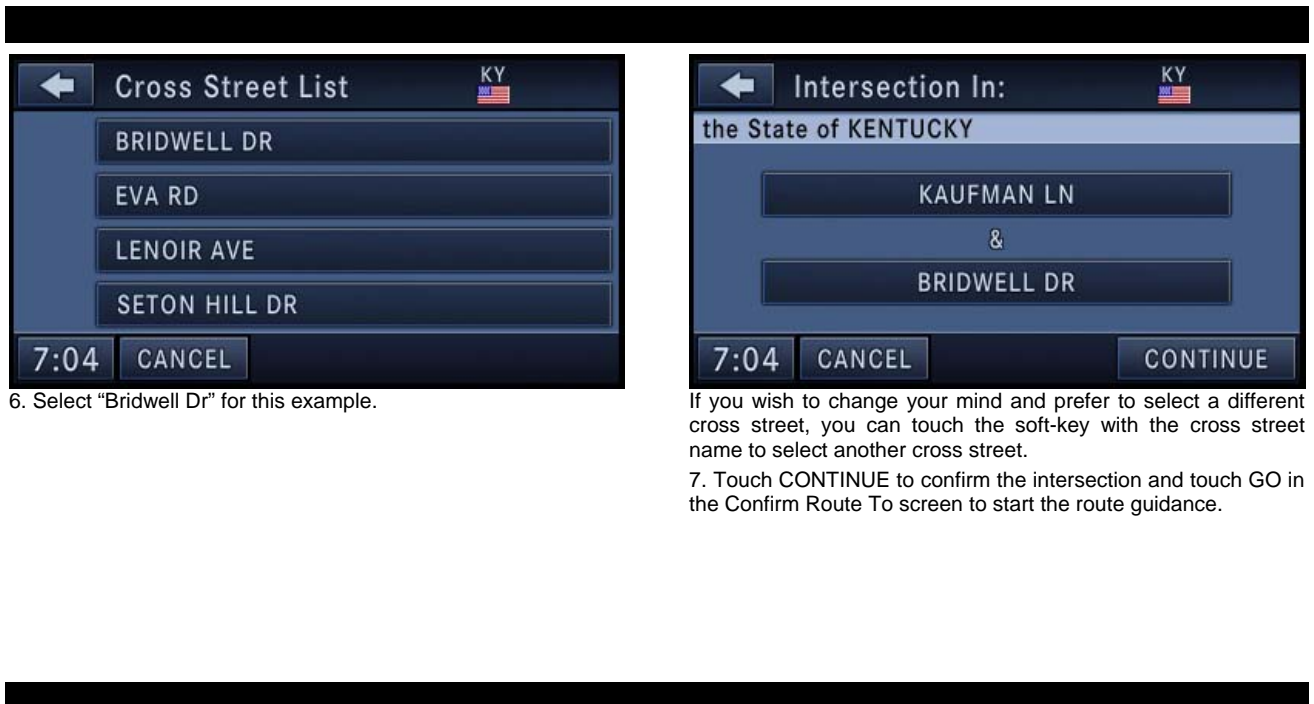

6. Select "Bridwell Dr" for this example.

If you wish to change your mind and prefer to select a different cross street, you can touch the soft-key with the cross street name to select another cross street.

7. Touch CONTINUE to confirm the intersection and touch GO in the Confirm Route To screen to start the route guidance.

Destination by Point of Interest

A point of interest (POI) can be found in different ways. Close to the current vehicle position (POI Local Area), close to the currently active destination (Nearby Destination), within the map database (POI in Map Area), by POI name, by phone number, and within a city.

POI Local Area

For this example we will continue by entering a Gas Station close to the vehicle location.



1. While you are in the NAV - Main Menu touch the Where AM I Now? soft-key. The navigation radio displays your current location on a map, and the location information (e.g. latitude, longitude, elevation, road name, city, state, if available).
2. Touch the NEARBY POI soft-key.



Select a POI category. For this example select Gasoline.

Note: Some categories maybe disabled while the vehicle is in motion.



The POI list shows the POI address, the distance to the POI (direct distance - as the crow flies), and a directional arrow.

3. Select one of the Gas Stations from the list and confirm your route by touching the GO soft-key in the confirmation screen.

POI Nearby Destination

For this example we will continue by entering a gas station close to the currently entered destination.



1. While the system is in guidance mode, touch the OPTIONS soft-key.



2. Touch the Destination Info soft-key to select the destination info menu.



3. Touch the Find POI Near destination soft-key and select a category, pick a gas station from the list and confirm the destination. This is the same process as described in the POI Local Area section.

POI in Map Area

To select a POI from anywhere on the navigation database map area, select Point of Interest in the Destination Entry screen.

 


You can find POI's by the POI name, by type, by the phone number, or by entering a city name.

Destination Input by Point on Map

This feature allows quick and easy selection of a destination directly from the map screen. By selecting a street segment or POI icon, you can quickly enter a destination without the need to input the city name or street.

1. Touch the MAP soft-key in the NAV - Main Menu to access the map.

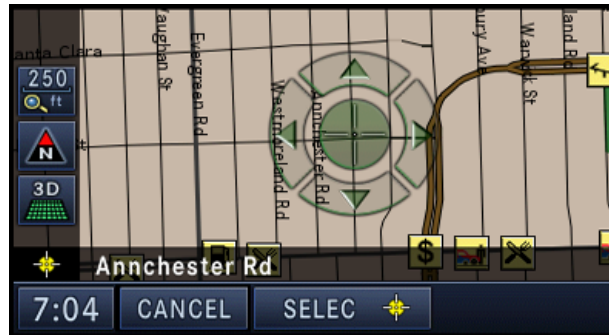

After touching the map on the screen, a set of arrows appears.

2. Use the arrows to navigate the center of the cross over the desired destination.

3. Either touch the SELECT soft-key to select the destination, or touch the POI'S soft-key to see a list of POI's in the selected area.

Destination Input by Geo Coordinate

Touch the Geo Coordinate soft-key in the Destination Entry screen.

Input Geo Coordinates

in DMS

Lat: ° ' "

Long: ° ' "

in Decimal Degrees

Lat: °

Long: °

7:04 CANCEL

To enter a Geo Coordinate as a destination, simply touch the Lat: soft-key and enter the latitude, then touch the Long: soft-key to enter the longitude.

Destination Input by Recent Destinations

Touch the Recent Destinations soft-key in the NAV - Main Menu.

Recent Destinations

1 of 5

LANCASHIRE ST/W OUTER ... 0.9mi

JR BLVD, NOVI, MI 12mi

N ALABAMA ST, INDIANAPO... 237mi

GREENFIELD RD, DETROIT, MI 5.0mi

7:04 HDD 15 EDIT LIST

Touch the soft-key with the name of the desired destination and confirm the route with GO to start the route guidance.

Touch the EDIT LIST soft-key to delete either all or single entries off the recent destination list. To exit the Edit Recent Destinations menu touch the DONE soft-key. To go back to the Main Menu touch the back soft-key in the upper left corner of the screen.

Destination Input by Address Book

 
Touch the Address Book soft-key in the Destination Entry screen.



Select a folder or touch SEARCH to search for the desired contact to enter the destination (see the Address Book section in this manual for more information).

Destination Input by Saved Locations


Touch the Saved Locations soft-key in the Destination Entry menu.

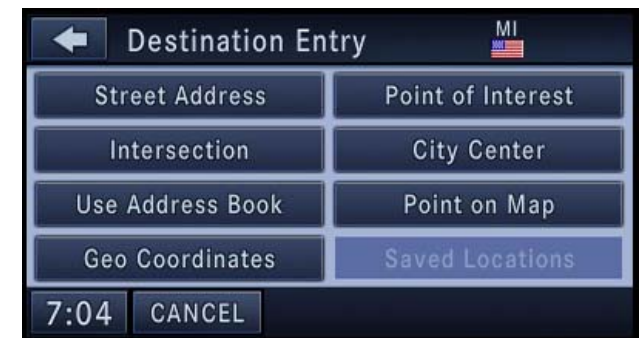

The Saved Locations soft-key is disabled if the saved locations memory is empty. To fill the saved destinations memory, you must either save a location as a Favorite Place from the Where Am I Now? menu, or record a trail with the RECORD NEW TRAIL soft-key from the NAV - Main Menu.



 Touch the Saved Locations soft-key.

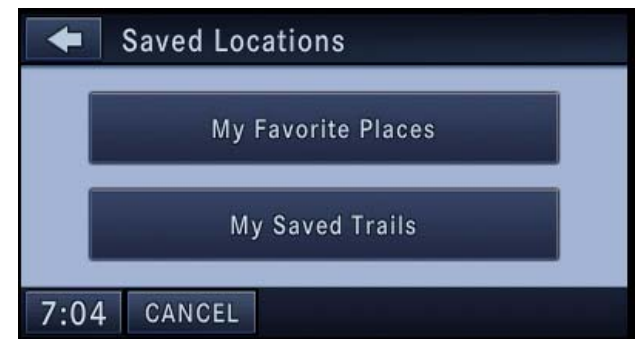

Touch the My Favorite Places soft-key to display a list of saved entries.

Touch the My Saved Trails soft-key to display a list of saved trail recordings.

Destination Input by Voice

Read the section Speech Dialogue System for details on the SDS.

1. Press the voice recognition hard-key (VR). Wait for the beep and say NAVIGATION.

The navigation radio will respond, saying: "Navigation." The navigation radio has switched to the navigation mode and is now ready to receive navigation-related voice commands. For this example, the default country is set to the US and the default state is set to Michigan.

2. Press the VR hard-key, wait for the beep. Say INPUT STREET.

The radio will respond: "for Michigan. Please say the name of the street."

3. Wait for the beep and say, LOLLY POP STREET (example).

The radio will respond: "Do you mean Lolly Pop Street?"

4. Wait for the beep and say YES.

The radio will respond: "Line one. Now, do you want to enter a city?"

5. Wait for the beep and say YES.

The radio will respond: "For Lolly Pop Street. The only city that could be found is Westland, Michigan. Do you want to use this city?"

6. Wait for the beep and say, YES.

The radio will respond: "City name has been accepted. Now, do you want to enter a house number?"

7. Wait for the beep and say NO.

The radio will respond: "Now, do you want to start route guidance?"

8. Wait for the beep and say YES.

The radio will start the route guidance to Lolly Pop Street, in Westland, Michigan.

While you drive towards the destination, you may press the VR hard-key, wait for the beep and say TRAVEL INFO.

The radio will respond with your estimated time of arrival and the distance to the entered destination.

Guide Me Home

Touch the Guide Me Home soft-key in the NAV - Main Menu, and touch the GO soft-key to confirm the route to the home address saved in the address book.

See the Getting Started and Address Book section in this manual for information on how to save, clear, or edit the home address.

Where Am I Now?

The Where Am I Now? menu displays location information for the current vehicle position.

Touch the NEARBY POI soft-key to search for a local POI.

Touch the SAVE LOCATION soft-key to save the current location in the Saved Locations memory.



Save the current location in the Favorite Places folder of the Saved Locations memory, in the Address Book, in the My Trips memory, or as the home address.

Emergency Info

Use this function to locate Emergency Points of Interest, e.g. Hospitals/Medical Facilities, Police Stations, Fire Departments, or Dealerships.

1. Touch the Emergency Information soft-key in the NAV - Main Menu.
2. Select Hospitals, Police Stations, Fire Departments or Dealerships.
3. Read and confirm the disclaimer.

Warning: The distances displayed in the Emergency facility lists are air distances (as the crow flies). In some cases the road distance to the facility may vary. Actual road distances will be displayed after a specific destination is selected and the route planning is completed. In unverified areas the route selected may not be the quickest route to your destination!

 
Touch the CALL 911 soft-key to dial 911 with a cellphone connected via UConnect™. See the UConnect™ section in this manual for more information on UConnect™.

Record New Trail

The trail function is a feature that allows you to log and save routes in non-digitized areas.



1. Touch the Record New Trail soft-key to record a route in a non-digitized map area.

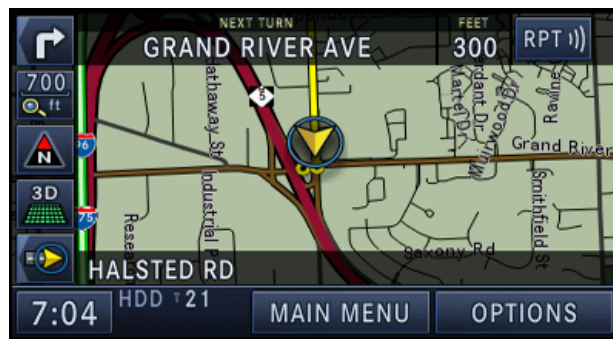

The system will switch to the map and the trail appears on the map screen as you drive along a route.

2. Touch the MAIN MENU soft-key to switch back to the NAV - Main Menu.



3. Touch the Stop/Save Trail soft-key.



 
- Touch Discard Current Trail to discard the trail and stop the recording.
 - Touch Continue Recording Trail to continue the recording.
4. Touch Stop and Save Current Trail.



- The trail will be named with time and date of the recording.
5. Touch the Change Name soft-key to edit the trail name.
6. Touch the DONE soft-key save the trail recording without changing the name.
- The trail recording is now saved in the Saved Locations Memory. The Saved Locations Memory, is accessible in the Destination Entry menu.

Route Guidance

After starting route guidance, the system calculates the route and announces: "Follow the arrows on the display." You will receive navigation recommendations by voice messages and screen displays.

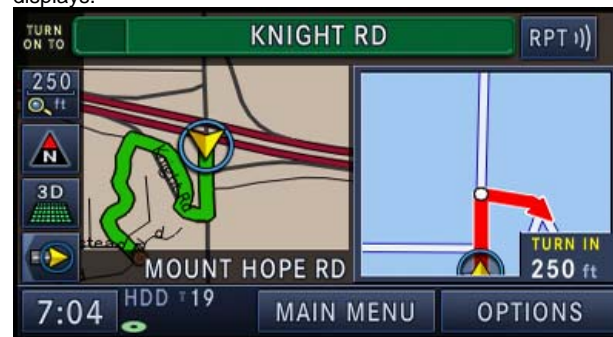

Navigation View Settings

Press the MENU hard-key to select the NAV Menu.



 
Touch the Full Map soft-key to display a full map during route guidance.

Touch the Turn by Turn soft-key to display turn arrows and intersection zooms on the right half of the screen.

Touch the Turn List soft-key to display a list of upcoming turns on the right half of the screen.

Map Items

Press the Map Items soft-key in the NAV Menu to access the Display Items on Map menu.

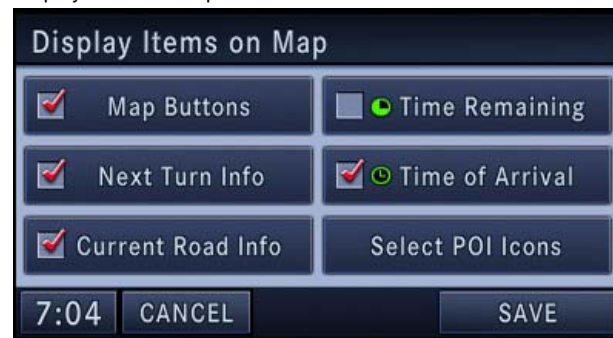

- Touch the Map Buttons soft-key to show or hide the Zoom, Map Heading, and the 2D/3D View soft-key.
- Touch the Next Turn Info soft-key to show or hide the next turn soft-key and the next turn information bar.
- Touch the Current Road Info soft-key to show or hide the NOW ON soft-key and the current road information bar.

- Touch the Time Remaining soft-key to show or hide the estimated time remaining until you reach your destination.
- Touch the Time of Arrival soft-key to show or hide the estimated time of arrival at your destination.

Touch the SAVE soft-key to save your changes.

POI Icons on the Map


The navigation radio is able to display available point of interests on the map.

Touch the Select POI Icons soft-key to show a list of point of interest icons.



Touch the icon soft-key to show or hide an icon on the map.

 Repeat Navigation Announcement

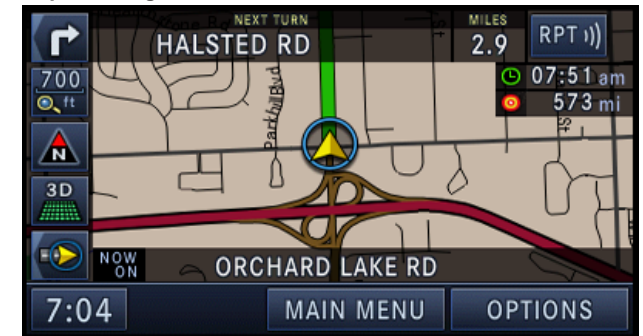

Touch the RPT soft-key in the upper right corner of the navigation screen to hear the current navigation announcement.

Automatic Re-Routing

If you miss a turn while navigating, the navigation radio will automatically adjust your route.

Route Options

After pressing the OPTIONS soft-key in the Route Guidance Menu, the following information is displayed:



In the left half of the screen, the current position and the current routing method are displayed.

The Change Method soft-key will allow you to change the routing method.

The View Destinations soft-key displays destination information.

The View Turn List soft-key list streets utilized for the current route.

The Take Detour soft-key will allow you to calculate a different route.

Canceling Route Guidance

The current route guidance can be aborted at any time by pressing the STOP ROUTING soft-key in the NAV -Main Menu.



Touch the YES soft-key to confirm the cancelation, or touch the NO soft-key to keep the route guidance.

Unverified Navigation Database Area

Unverified areas are roads that are included in the database but have not been verified.

Route guidance in an unverified area is different from the guidance you receive in a detailed, verified area. When traveling in an unverified area, turn-by-turn guidance and voice prompts cannot be provided.

The navigation system will suggest a route highlighted in green. This is only a route suggestion. In an unverified map area, the navigation system is unaware of turning restrictions e.g. one way roads, or where turns are not permitted.

 
Notes on Route Guidance

During navigation you will receive voice recommendations to help guide you. The following explains some guidance messages you may receive.

Warning: Danger of Accident! DO NOT IGNORE TRAFFIC LAWS. If a driving recommendation contradicts the traffic laws, the laws ALWAYS take precedence!

"Make a U-turn if possible." - You are driving in the wrong direction and should turn around at the earliest legal opportunity.

"Follow the arrows on the display." - This display tells you that you are currently in an area, such as a parking lot, garage, etc., that is not contained on the digital street map. The arrow indicates the actual geographic direction to the destination.

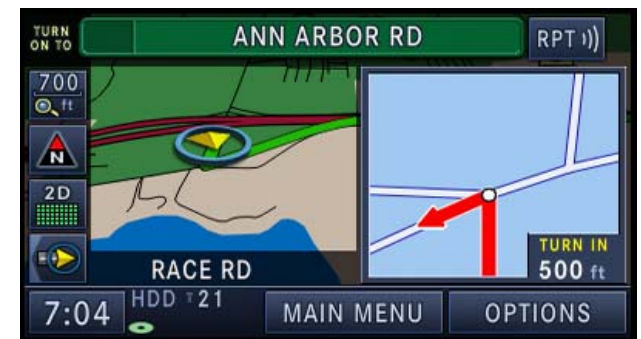

"Please take a sharp left in 500 feet." - The red arrow points in the direction you should turn. The dot indicates a maneuver point.



"Follow the road." - You should continue driving on the current road for the distance shown.

"Prepare to take a left" or "Keep left in one mile." - Keep left does not mean to use HOV lanes or express lanes. You should note that there is an upcoming turn and prepare to make any lane changes needed to safely make the turn. As always, road safety must be observed when making a lane change.



"Take the second exit to the right." - This means to pass the first exit after this announcement is given.

"Take the second turn on the right." - This arrow shows you which exit you should take from a traffic circle.

will switch back after few seconds.

Note: At intersections and traffic circles, only the ends of the roads to be passed are displayed.



"Keep right in half a mile." - "Keep right" means that the street will fork and you should follow the indicated direction.

 
"You have reached your destination." - The specified destination has been reached and route guidance is terminated. The display

Navigation Options

Options before activating the route guidance

Before confirming the route with the GO soft-key, it is possible to select options different from the default route settings.

Touch the OPTIONS soft-key in the Confirm Route screen to get to the NAV options screen.

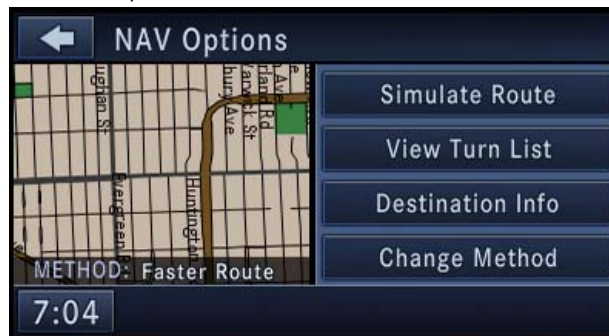

Press **Simulate Route** to simulate the route.

View Turn List to see a list of turns on the route.



 
Use the page soft-keys to scroll through the list of turns. The turn soft-keys display the length of the route segment, direction of turn, and the name of the street.

Touch a street in the list either to avoid the street or to preview the turn in the map view.



Touch the Avoid This Road soft-key to avoid the selected turn in the list. The route will be re-calculated, if an alternate route is possible.


Touch the Show This Turn soft-key to display a map of the area surrounding the selected turn.

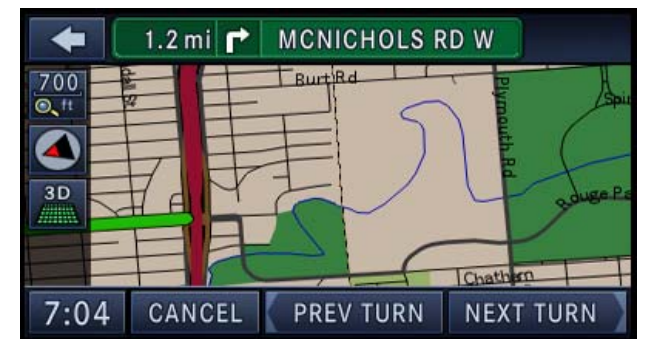

The turn will be displayed in the center of the map. Touch the NEXT TURN soft-key to show a map of the area close to the next turn in the turn list, touch the PREV TURN soft-key to show a map of the area close to the previous turn in the turn list.

Touch the back soft-key to go back to the Turn List menu.

 Touch the **Destination Info** soft-key in the NAV Options menu to find a map of the destination area, the complete address or co-ordinate of your destination.

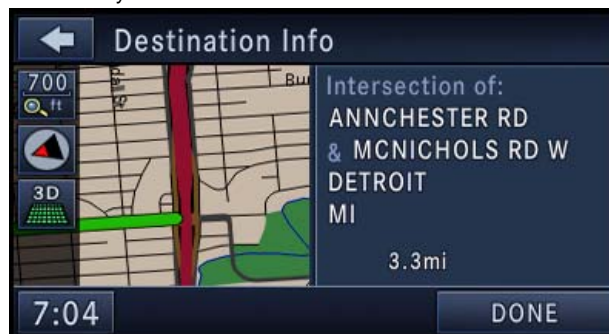

Touch the Find POI Near Destination soft-key to exchange the destination with a POI near to the desired destination. Read more about POI in the POI section of this manual.

Touch the **Change Method** soft-key in the NAV Options menu to change the default routing method.



After you touch one of the method soft-keys in this menu the CHANGE soft-key will appear for confirmation of the method change.

 
Note: Since toll roads, tunnels and ferries are built for the purpose of shortening travel distances, avoiding these road types may increase distance and travel time.

Options During Route Guidance

During active route guidance the Simulate Route soft-key is replaced by the Take Detour soft-key.



Touch the Take Detour soft-key to access the Detour From Route menu.

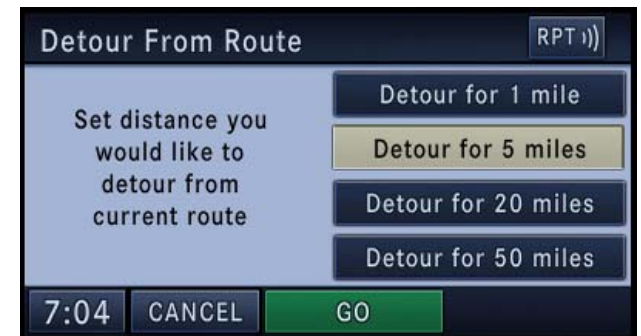

Select a distance and touch the GO soft-key to confirm. The navigation will avoid the roads in the turn list for the selected distance and calculate an alternate route.

Navigation Default Settings

Touch the NAV Settings soft-key in the Navigation Main Menu to select the preferred measurement, set default routing method, view GPS information, and adjust guidance prompt volume.

Set Measurement Metric/US



From the Navigation Main Menu touch NAV Settings and then select either mi/ft or km/m.

Set Default Routing Method



Mark or unmark route parameters and then touch the SAVE soft-key to confirm the changes. Press the NAV hard-key to cancel without change.

Note: Avoiding freeways, toll roads, tunnels or ferries may result in very long routes.

GPS Information



The GPS Information menu displays Current Location, Coordinates in degrees, minutes and seconds (touch the DECIMAL soft-key to switch to Decimal degrees), number of used satellites, a map of the calculated position, and elevation.

Press the NAV hard-key to exit to the NAV Main Menu.

Guidance Prompts



Select and adjust the navigation guidance prompts in this menu. Touch the SAMPLE VOL soft-key to listen to the current volume setting.

Once satisfied with the volume, touch the SAVE soft-key to save the settings. Touch the CANCEL soft-key to exit the menu without saving the settings.

Map Viewer

 
Press the NAV hard-key to switch to the navigation MAIN MENU. Press the NAV hard-key again to toggle between navigation MAIN MENU and navigation MAP.



The tip of the arrow in the circle in the center shows your vehicle's position on the map. The square soft-keys on the left show the map zoom factor, the map orientation, the display mode, and the current location soft-key.

Map Zoom Level

Press the Zoom soft-key to change the zoom level.

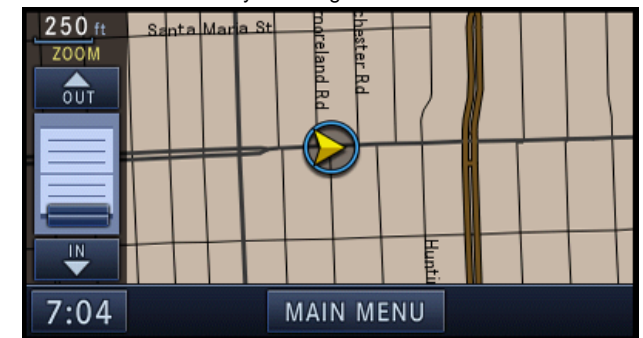

Touch the slider or the IN and OUT soft-keys to change the zoom level.

Map Orientation

Touch the soft-key with the compass arrow to toggle between a map oriented to the North, or oriented parallel to the vehicle heading.

3D Map Viewer

Touch the soft-key with the 2D/3D symbol to toggle between 2D or 3D map views.

Stop Over



When the route guidance is active, press the Add Stop Over soft-key, to add multiple destinations. After you confirm a stop over, you may either go to the entered stop over first, or to add it to a destination list.

Touch the ADD soft-key to confirm the stop over destination.

Note: Once you reach a destination, the system will automatically guide you to the next destination on the list.

To review the destination list, touch the OPTIONS soft-key in the Route Guidance screen and touch the VIEW DESTINATIONS soft-key.

To show the destinations information touch the desired destinations soft-key.

Touch the DONE soft-key to exit the Destination Info menu.

Trip Planner

If you are traveling to multiple destinations, the My Trip function will allow you to calculate and save the route to each destination.

 
1. Touch the My Trips soft-key in the NAV - Main Menu.



2. Touch the PLAN NEW TRIP soft-key to start a new trip.




3. Name the trip and touch the SAVE soft-key.

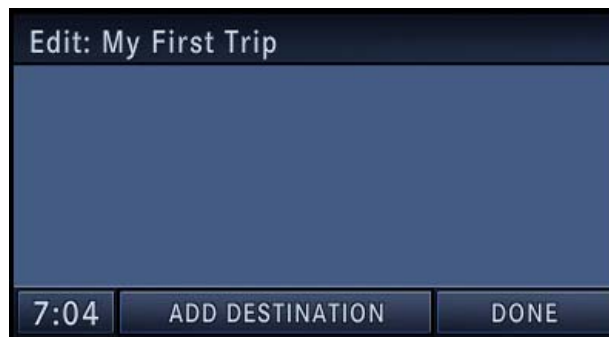

4. Touch ADD DESTINATION.

 5. Enter a destination (see section Destination Input in this manual).

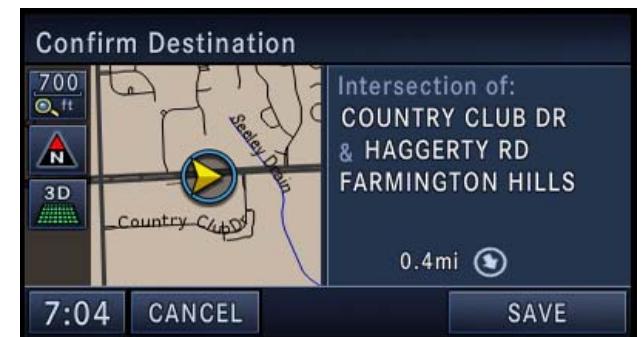


In the Confirm Destination screen

6. Touch the SAVE soft-key to add the destination to the list.



Note: You can add up to 9 destinations to a trip. The display shows the Itinerary is FULL message in the status line, if all 9 destinations are used.

 7. Touch the DONE soft-key to access the My Trips menu.

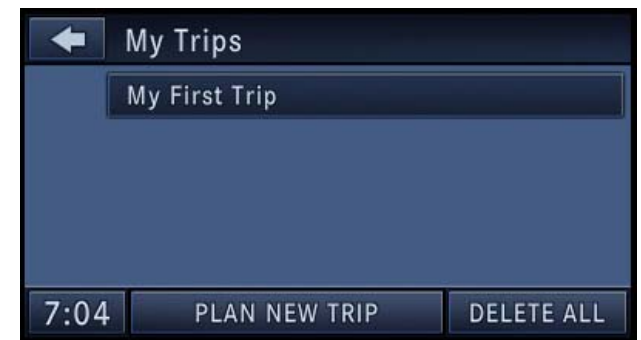

8. You may now either PLAN NEW TRIP, DELETE ALL your trips, or select your trip by touching the soft-key with the desired trip name.

Note: You may add up to 12 trips to the list. The display shows the My Trips is FULL message in the status line, if all 12 trips are used.



9. Touch a destination soft-key to get the destination information, or touch the START THIS TRIP soft-key to start the trip.

10. Touch the GO soft-key to confirm the first destination of the trip.

You may touch the EDIT TRIP soft-key to edit the trip.



In the Edit Trip menu you may rename, delete, or edit the details of this trip. Touch a destination in the list.

From the Edit Trip menu touch the desired destination you would like to edit.



You may now Change Name or Change Address.
Touch the DONE soft-key to confirm your changes.

Touch the Modify Input Order soft-key in the Edit Address Info menu to rearrange the order of the destinations in the trip.



Touch the yellow up and down arrow soft-keys to move the entry in the list. Touch the SAVE soft-key when you are done.

TMC by Sirius Satellite Radio

The Traffic Message Channel (TMC), provided by Sirius Satellite Radio, is a specific application of the radio receiver used for broadcasting real-time traffic and weather information.

 
The navigation radio receives traffic messages with the satellite radio receiver. You must have a subscription with Sirius to receive this service. Refer to the Re-Subscribe to Sirius Satellite Radio chapter in the Radio section of this manual.

Display Traffic Messages

1. Press the MENU hard-key on the right side of the radio.



2. Touch the TMC Traffic soft-key to display the available traffic messages.

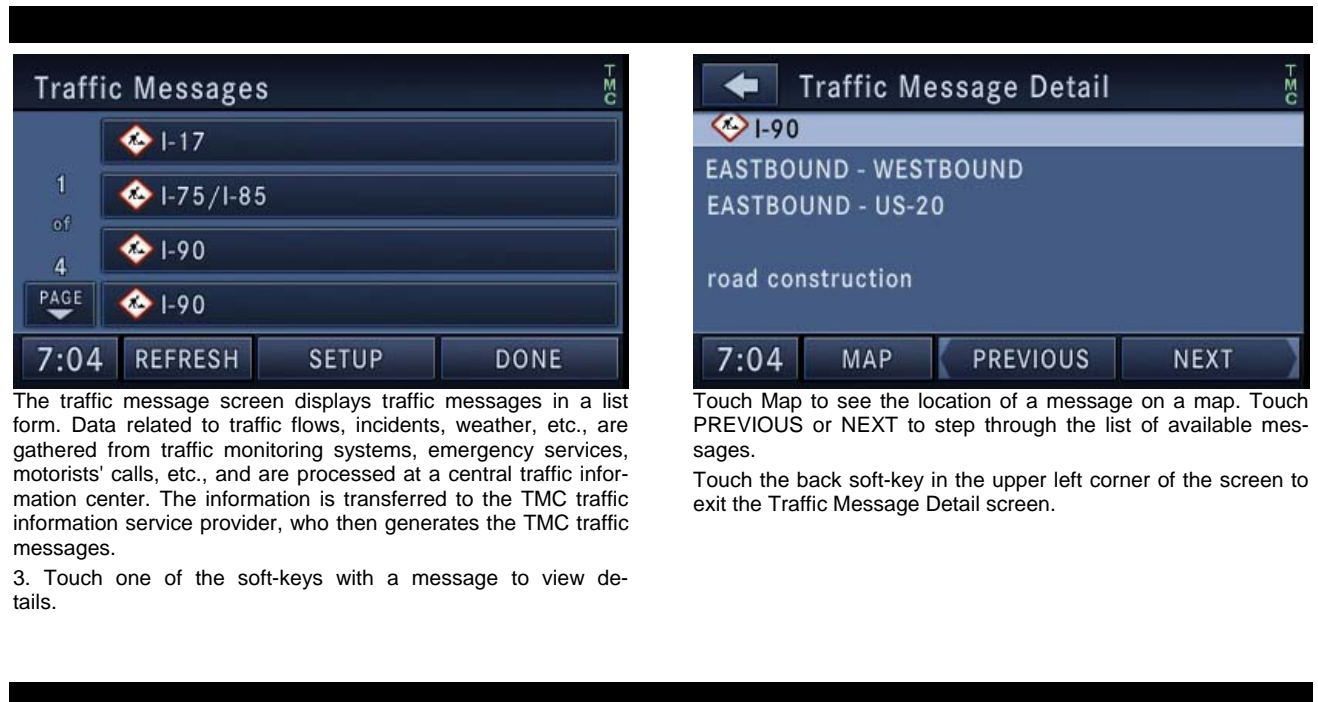

Touch setup to access the setup menu.



Touch the TMC soft-key to switch TMC on or off. Touch Warning Prompts soft-key to enable warning prompts. Once you change settings, touch the SAVE soft-key to confirm your changes.

You can view either all received messages for the area you have a subscription, or only the messages on your route within the same area.

Ongoing route guidance will change your route, based upon the traffic information received. The AUTO mode will make these

changes automatically; the MANUAL mode will ask for each traffic event.

 
Touch the Legend soft-key to display a list of possible traffic icons. The icon will be displayed in the map mode.

TMC Legend

The navigation radio can display icons on the map when the TMC function is active.

Note: It can take between 15 and 30 minutes for a message to reach the system.

Touch the LEGEND soft-key in the Traffic/TMC Setup menu to review possible icons and their meaning.

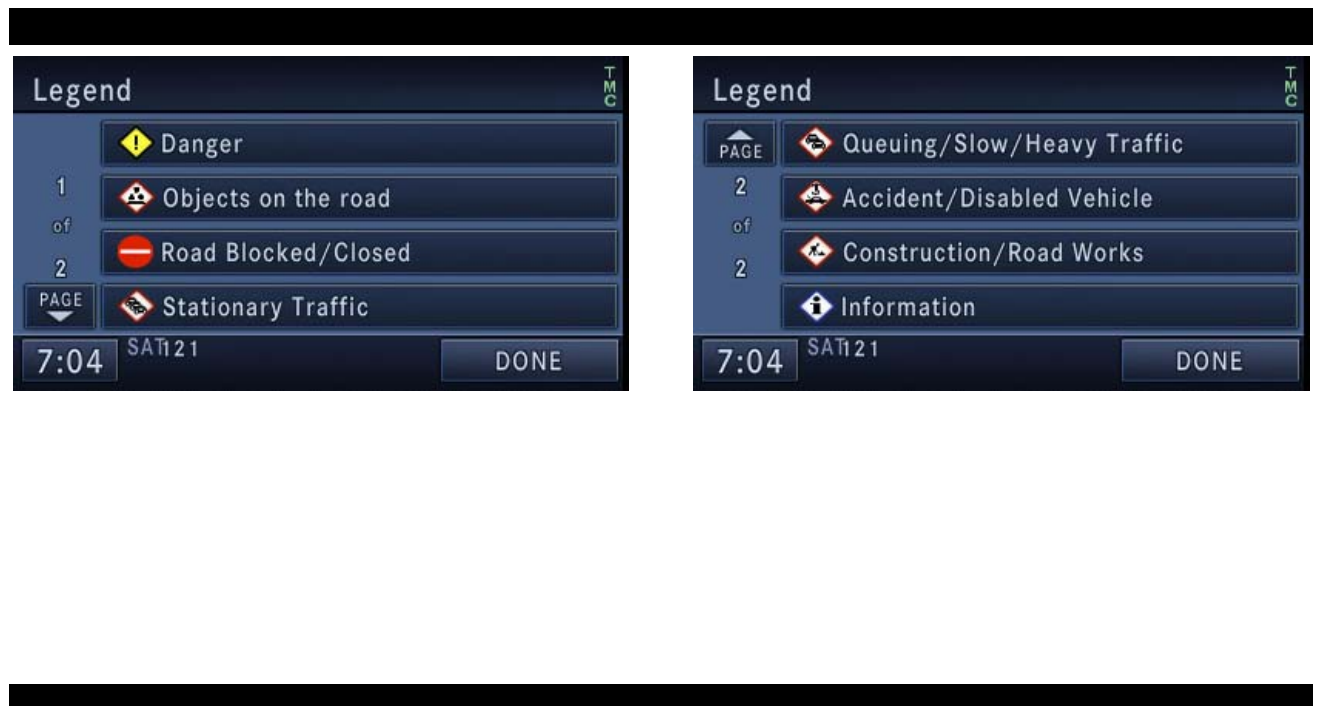

Address Book

Overview

The address book provides a way to organize and store frequently used addresses.



The address book is organized in folders.

- The HOME folder

contains only your home address. Touch this folder soft-key to edit the home address. You may route to this address by touching the Guide Me Home soft-key in the NAV Main Menu.

- The In-Motion Folder

contains links to entries in the other folders. The In-Motion Folder is the only folder accessible while the vehicle is in motion. This is a safety feature that limits the availability of certain navigation tasks while the vehicle is traveling. Touch the In-Motion Folder soft-key and add links to existing entries in the Default Folder, VR Created Entries folder, or any of the personalized folders.

- The Default Folder

contains contacts which are available whenever the vehicle is not in motion. Touch the Default Folder soft-key to add, edit, delete, and route to your contacts.

- The VR Created Entries folder

contains contacts which were created with the help of the speech dialog system. Touch the VR Created Entries folder soft-key to add, edit, delete, and route to your contacts.

Add a Folder

Touch the +Folder soft-key to add a personalized folder. After the new folder is named, the folder will be available in the address book.

Entering/Editing/Deleting an Address

1. Touch MENU to access one of the menus.



2. Touch My Files for the Manage My Files screen.



3. Touch My Address Book soft-key to get to the Address Book menu.



The Address Book screen appears.

4. To select an address from the Default folder, touch the Default Folder soft-key.

To select an address from another folder, touch one of the folder soft-keys.



5. Touch the ADD soft-key to add a new contact. Touch CLEAR ALL to delete all contacts in this folder, touch DONE to go back to the Address Book menu, or touch a soft-key with a contact name to view, edit, or change the Contact Information.



You may now create a new contact or copy a contact from another folder.

6. Touch Create New Contact to go to the next screen.



7. Enter a name for your new contact.

 
8. Press the SAVE soft-key to display the Contact Information menu.



You may now edit the contact information. Add a voice tag for the voice recognition or touch the Edit Contact soft-key to add more information to the entry.

Touch the DELETE soft-key to delete the contact.

In this example, we need to add an address to the contact.
9. Press Add Address and enter a destination (refer to Destination Input section in this manual).

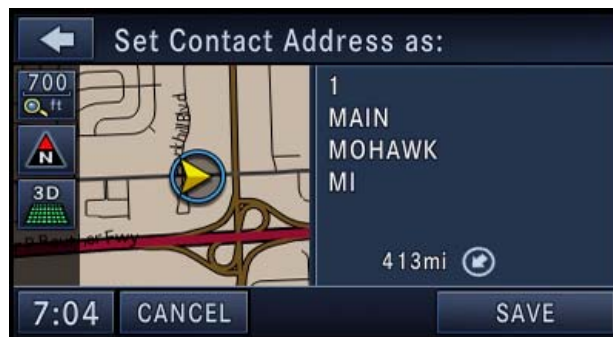

10. Once the destination is entered touch the SAVE soft-key to confirm the address.



In addition, you may enter a phone number by pressing the Add Phone # soft-key.

11. Touch the DONE soft-key after all available information has been entered.

Search a Contact in the Address Book

1. Touch the SEARCH soft-key in the Address Book menu.

Search for Contact:

B. Jeffries 1 Total

A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R
S	T	U	V	W	X	Y	Z	0-9
DEL	SPACE	-	&	/	.	MORE ...		

7:04 LIST CONTINUE

2. Enter a contact name.

3. Touch either LIST or CONTINUE.

Search Results

1 Jim

1 Jim Smith

7:04 CANCEL

4. Touch the Jim Smith soft-key from the results list to select the contact.

Contact Information

B. Jeffries

1

MAIN

MOHAWK

MI

Edit Contact

Voice Tag

Route To

Call Contact

7:04

DELETE

DONE

5. Once the contact information is displayed, touch the Route To soft-key to start route guidance to the contacts address, or touch Call Contact, if a valid phone was entered, and a telephone is connected to the navigation radio.

System Information

Press the MENU hard-key on the right side of the radio, and touch the System Setup soft-key to access the System Setup menu.

Touch the System Information soft-key to access the system information.

← System Information

SOFTWARE		
Application	Database	Gracenotes
8.007	N 106 0636	534

HARDWARE	
Serial Number	System
	6816 004

7:04

HDD 1 2

User Data Backup

Visit <http://www.chrysler.com/mygig/> for information on how to backup or transfer your user data, such as address book entries, music files, etc., before returning or changing to a vehicle with a compatible navigation radio (e.g., end of lease).

Software and Database Updates

Visit <http://www.chrysler.com/mygig/> for information on available software and database updates.

Updates are available for the navigation radio software, the Gracenote® music recognition technology database, and the navigation database.

Please read the specific instructions on the update discs before installing the updates.

Contact your local DaimlerChrysler dealership, if you need help or more information about the available updates.

Troubleshooting

Radio

Q.: I cannot find my favorite radio station that I was always able to receive before. What can I do?

A.: Select MUSIC TYPE while in radio mode. Select CLEAR to disable all PTY filters, and try to SEEK for your station.

Disc

Q.: The radio does not display the information for the disc I inserted. How do I access this information?

A.: The radio will search the internal Gracenote® music recognition technology database on the hard drive for the inserted disc. If the database is out of date, or the database does not contain the particular disc, the information cannot be displayed. Contact a DaimlerChrysler dealership or website <http://www.chrysler.com/mygig/> for available updates.

Navigation

Q.: I entered the wrong home address. How can I change it?

A.: Go to Destination Input, then Saved Locations. There you will find the Home Address. Press EDIT to edit the entry.

Voice Recognition

Q.: The voice recognition does not understand what I say. What can I do to make this work?

A.: If the navigation radio has trouble recognizing your voice, you should press the MENU hard-key, press System Setup, and then press the Voice Recognition hard-key to access the Voice Recognition menu. Touch the Start Voice Training soft-key and follow the spoken instructions.

UConnect™

Q.: I am in a gas station and my cellphone is ringing, I try to answer the call, but I do not hear anything. How do I get the call?

A.: Your phone is still connected with UConnect™ via Blue Tooth, the navigation radio expects you to be in the car. You need to temporarily disconnect from Blue Tooth to answer the call. Refer to the user's manual of your Blue Tooth device.

Glossary of Terms

AS Autostore

CD Compact Disc

CDC Compact Disc Changer

CDDB A technology company founded in 1995 as CDDB, Inc.
Now renamed to the Gracenote Media Database

DVD Digital Versatile Disc

DVDC Digital Versatile Disc Changer

FIX A position determined from terrestrial, electronic, or astronomical data.

GMD Gracenote Media Database, Gracenote Media Recognition Service (www.gracenote.com)

GPS Global Positioning System

GMT Greenwich Mean Time

HDD Hard-Disk Drive

HFM Hands-Free Module

MFB Multifunction soft-key

MFS Multi Functional Steering Wheel

MP3 MPEG-1 Audio Layer-3. Compression scheme used to transfer audio files via the Internet and store in portable players and digital audio servers.

M4A The .M4A format is actually the audio layer of (non-video) MPEG 4 movies.

M4P The .M4P format is an audio file purchased from Apple's Music Store (iTunes) and is protected by a Digital Rights Management scheme.

NAV Navigation

NCD Navigation Compact Disc

POS Position

PTY Program type (radio)

RDBS Radio Data Broadcasting System

SAT Satellite Radio

SDS Speech Dialog System

TMC Traffic Message Channel

UTC Universal Coordinated Time

VES® Vehicle Entertainment System

WMA Windows Media Audio Format

VES Vehicle Entertainment System