



REMOVAL

1. Using a trim stick C-4755 or equivalent, pry the shift bezel out of the floor console.
2. If equipped, remove electrical connectors attached to shift bezel.

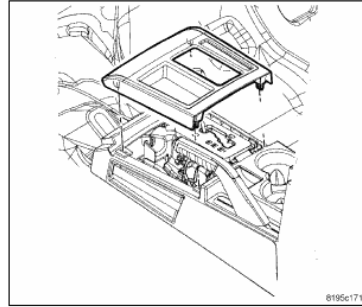

3. Open console lid (1).
4. Using a trim stick C-4755 or equivalent, release the fasteners at the four locations around the floor console end cap (2).
5. Disconnect electrical connectors (3) from end cap (2).
6. Remove end cap (2).

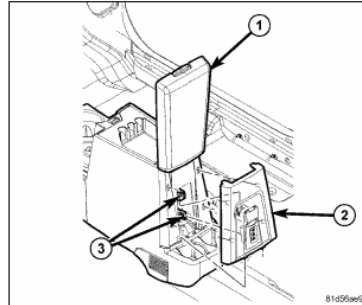

7. Remove ash cup (3) from console (1).
8. Remove bin (4) from console (1).
9. Remove two screws (2) from front of console (1).
10. Remove two screws (5) from rear of console (1) located inside the console bin.
11. Lift console (1) at back and remove.

